


# Automatic Conical Burr Coffee Grinder

## User Manual

Model:HB-583

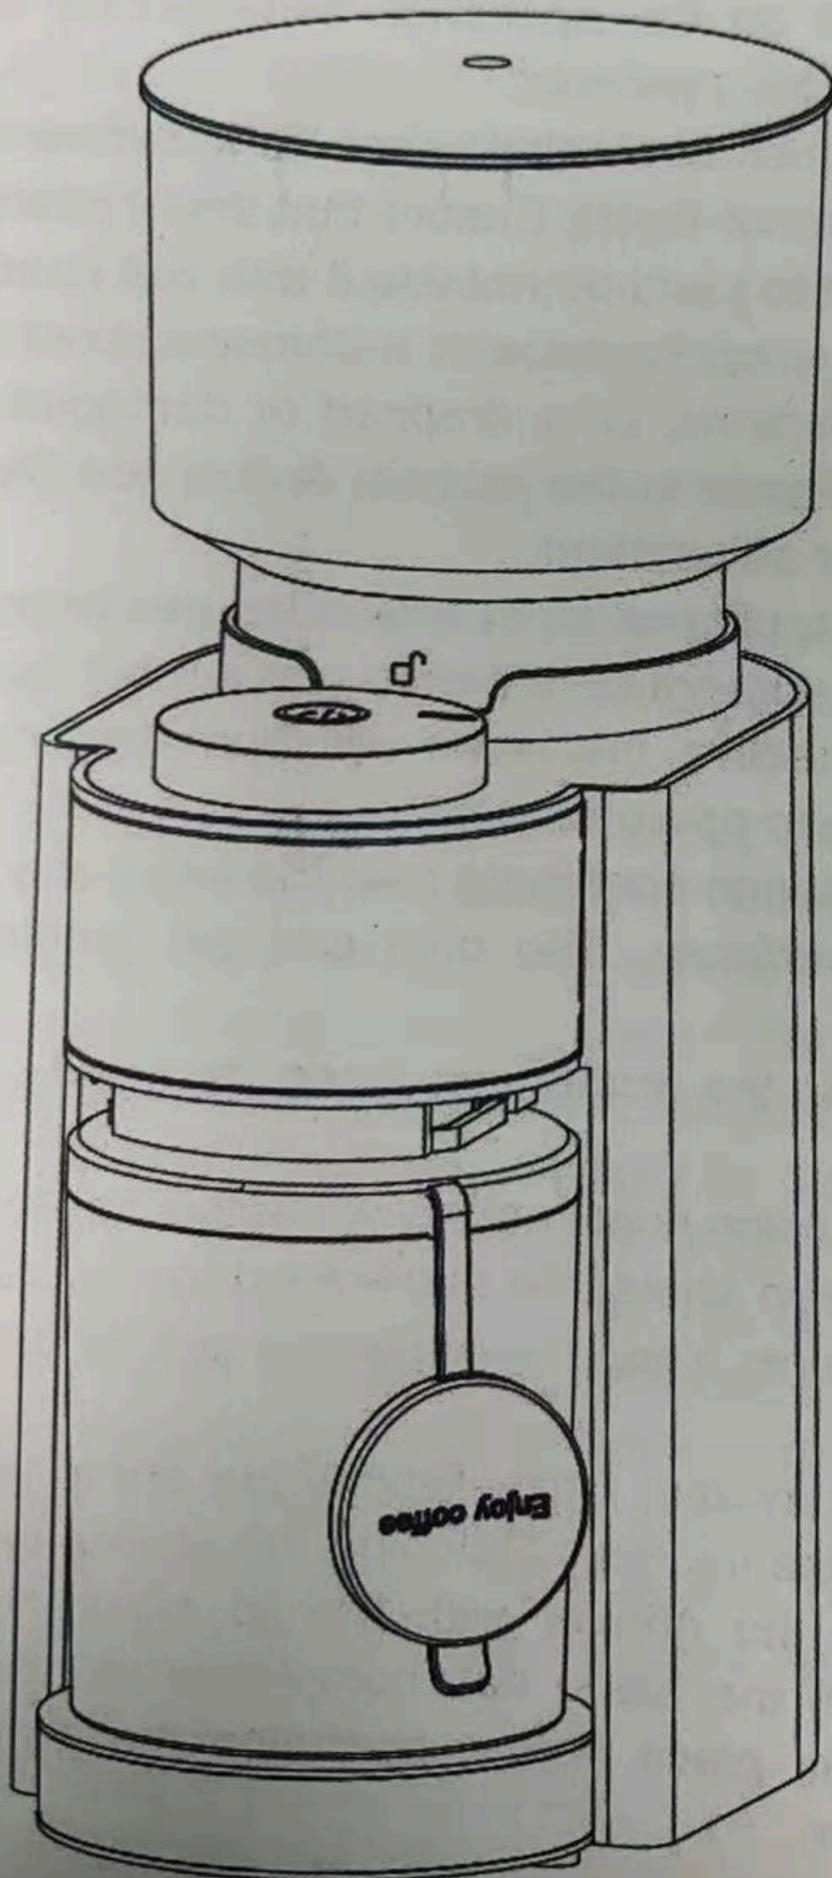

# IMPORTANT SAFEGUARDS

EN

This appliance is intended for HOUSEHOLD USE ONLY.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:


1. READ ALL INSTRUCTIONS BEFORE USE.
2. Before connecting the appliance to any power supply, check to see if the voltage indicated on the appliance corresponds with the voltage where you plan to utilize a product.
3. To protect against risk of electric shock, do not immerse cord, plug or machine in water or other liquid. Ensure that the appliance does not get wet (water splashes etc.) and do not use it with wet hands.
4. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Only return this appliance to the nearest Authorized Service Center for examination, repair or adjustment.
5. Do not place this appliance on or near a hot gas or an electric burner, or in a heated oven. Do not let the cord contact hot surfaces, including the stove. The protective insulation will burn making the appliance inoperable or unsafe to operate.
6. Do not let the appliance cord hang over the edge of a table or counter, or touch any hot surfaces. The cord can get tangled or cause the appliance to fall.
7. Do not immerse the motorized base in liquid, or place in the dishwasher.
8. Close adult supervision is necessary when this appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its cord out of reach of very young children.
9. Avoid contacting moving parts. Blades are sharp and spin at a high speed and can cause injuries. Touching the blades can cause injuries.
10. Always operate the grinder with the lid securely in place. Do not remove the lid until the blade has completely stopped. Be certain the cover is securely in place before operating the appliance, to prevent injury or bodily harm.

11. Do not attempt operation without the lid being in place.
12. The use of attachments not recommended or sold by Hubo may cause fire, electric shock or injuries. Only items designed for use with this appliance should be used at all times.
13. Do not use the appliance outdoors. This unit is designed to be used only indoors.
14. Check the bean hopper for the presence of foreign objects before uses.
15. Misuse may cause potential injury.
16. Unplug the grinder from the outlet when not in use, before putting on or taking off parts, and before cleaning. To unplug, grasp plug and pull from the electrical outlet. Never pull the cord. You might accidentally start the appliance if the unit is still plugged into the outlet and cause serious personal injury.
17. Care should be taken when handling the sharp cutting blades and during cleaning.
18. Do not use the appliance for anything other than its intended household use.
19. Do not dismantle the appliance under any circumstances. No warranty claims are accepted for damage caused by improper handling.
20. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety. This Appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and if they understand the hazards involved.
21. After grinding one full hopper of coffee beans, please wait for one minute before attempting to grind a second full hopper of coffee beans. After grinding six full hoppers of coffee beans, please wait until the unit cools down to room temperature if you need to grind more.

**SAVE THESE INSTRUCTIONS**

# KNOW YOUR COFFEE GRINDER

- 1.Bean Hopper Lid
- 2.Bean Hopper
- 3.ON/OFF Button
- 4.Cup Selection Dial
- 5.Motor Housing
- 6. Built-In Cleaning Brush
- 7.Porta-Filter Holder
- 8.Grinding Chamber Lid
- 9.Grinding Chamber

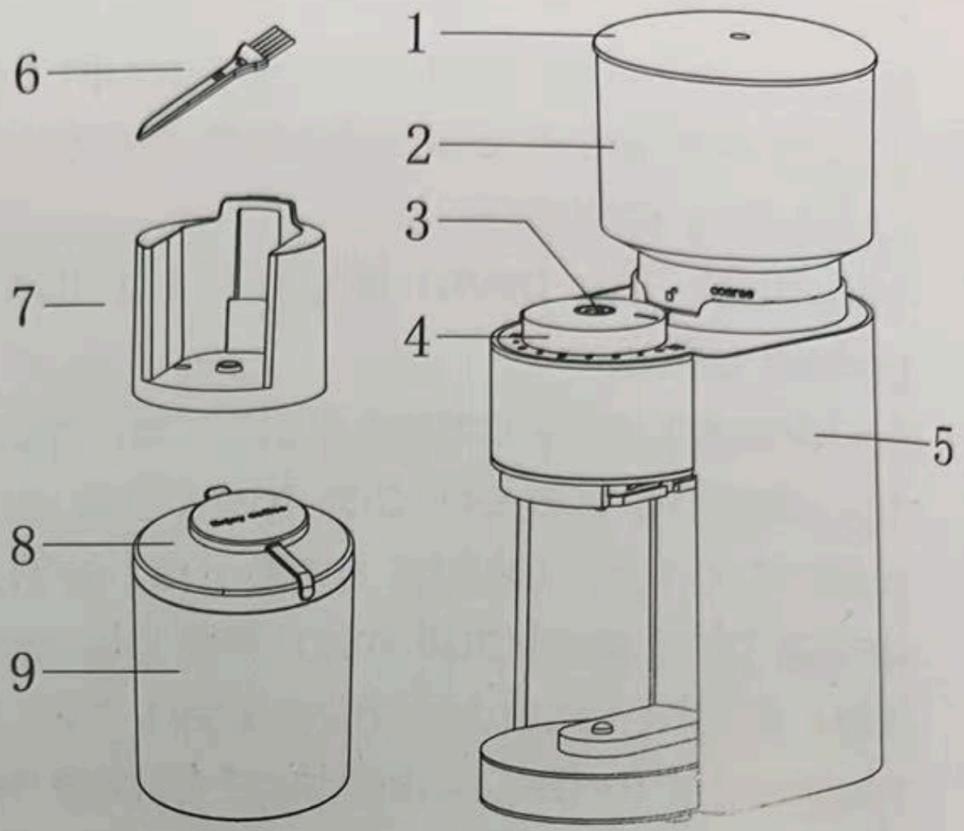

## COFFEE GUIDER OVERVIEW

This Coffee Grinder has 25 unique grinding size settings that are suitable for a large range of brewing styles, from the finest setting for espresso to the coarsest setting for French press. By adjusting the Cup Selection Dial you can choose from 2 to 12 cups of coffee grounds as desired.

### GRIND SIZE SETTING RECOMMENDATIONS

Coffee Type	French Press	Drip coffee Pour Over	Espresso
Grinding Style	Coarse	Medium	Fine
Suggested Grind Size	25-17	16-8	7-1
Cup Selection	2-12 cups	2-12 cups	2 cups
Default Maximum Grinding Time	54S(12 cups)	54S(12 cups)	9S(2 cups)
Optional Accessories	Grinding Chamber	Grinding Chamber	Porta-Filter Holder

**NOTE:**The Bean Hopper holds a maximum of 250g of coffee beans, and the Grinding Chamber holds a maximum of 160g of coffee grounds.

**CAUTION:**The Bean Hopper can not be used for storing coffee beans and the Grinding Chamber can not be used for storing coffee grounds, please empty the coffee beans in the Bean Hopper and empty the coffee grounds in the Grinding Chamber after the grinding process has been completed.

**NOTE:** The cleaning brush can be only used to clean the appliance after it has been used and it must be completely shut down.

## Prior To First Time Use

Before using the coffee grinder, wipe the housing and bean hopper with a clean damp cloth. Make sure the inside parts are completely dry before using. Wash the grinding chamber and the grinding chamber lid in warm soapy water, then rinse and dry. (Refer to "Cleaning the Coffee Grinder")

## USING YOUR COFFEE GRINDER

### ASSEMBLY

1. Install the bean hopper into the correct position of the appliance (as shown in the image provided).

Align the unlock icon  on the base with the icon  on the hopper. Make sure the positioning nodules on the bean hopper align with the grooves on the main body.


The hopper can be removed when the icon  on the hopper aligns with the  icon.

2. Turn the hopper clockwise to lock it into place, and then the coffee grind size can be set.

3. The coffee grinder has 25 grinding size options. Adjust the grinding size by rotating the hopper clockwise and then aligning the indicator on the hopper to the desired grinding size from coarse to fine depending on the type of coffee grounds needed.

4. Open the lid of the bean hopper and fill the bean hopper with the desired whole coffee beans, then close the lid.

Note: The Bean Hopper holds a maximum of 250g of coffee beans.

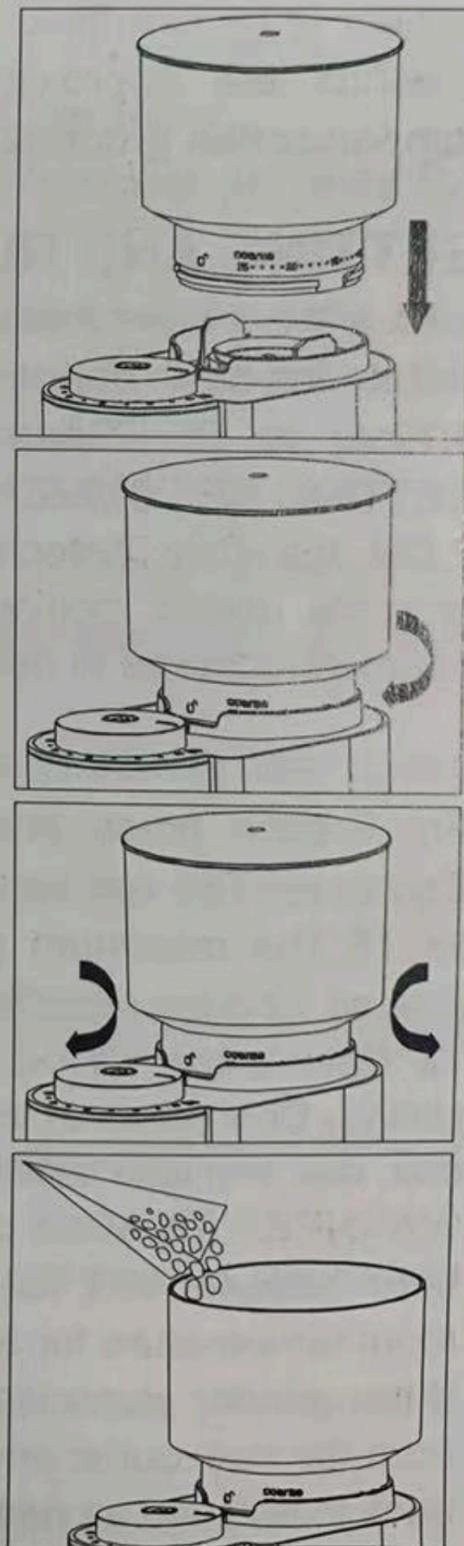

5. Using the Grinding Chamber:  
Fit the grinding chamber and the lid for it (with the sealing ring opened) in the correct positions. Check to make sure that the parts are correctly positioned on the body of the product.

NOTE: The Grinding Chamber holds a maximum of 160g of coffee grounds.

6. Using the Porta-Filter Holder:

① Insert the Porta-Filter holder into the bracket grooves under the ground coffee outlet by pushing the holder until it is seated in its groove.

② Installing the Porta-Filter onto the filter holder.


NOTE: It is normal for the correct amount of coffee to appear to be overfilled in the Porta-Filter. Untamped coffee grounds are approximately three times the volume of tamped coffee grounds.

## SETTING AND RUNNING THE GRINDER

1. Plug the grinder into a power outlet.

Rotate the bean hopper to select the grind size ranging from 1 (Fine) to 25 (Coarse). Refer to the "GRIND SIZE SETTING RECOMMENDATIONS".

2. Set the Cup Selection Dial to the desired amount of grounds (rotate clockwise to increase the amount; rotate counterclockwise to decrease the amount).

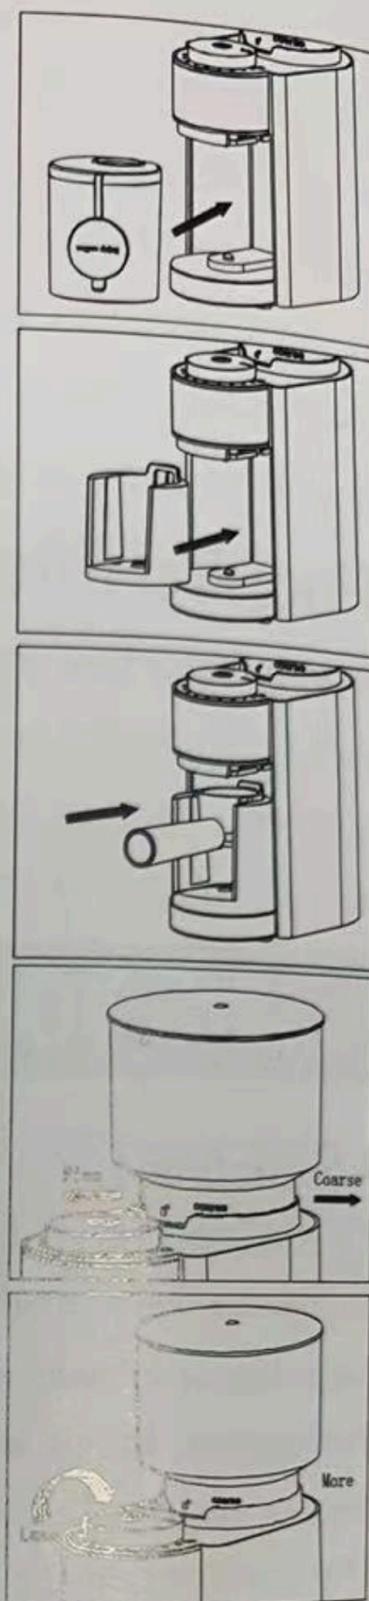

For French press and Drip coffee: You can select between 2-12 cups. For Espresso: You can select between 2 shots.



NOTE: The maximum grinding time is the amount of time that it would take to ground 12 cups of coffee grounds.

TIP: Refer to the "GRIND SIZE SETTING RECOMMENDATIONS" for preset settings. Depending on your needs, you may wish to experiment with the different grinding size, cup, and time settings to achieve the desired Grinding outcome.

WARNING: To avoid overheating the motor, do not grind more than 2 full whole bean hoppers or 2 full 12-cup cycles without a break. Allow the motor to cool to room temperature for at least 30 minutes.

If the grinder stops working after running consecutive cycles, unplug the grinder from the wall outlet and allow it to cool for at least an hour. Then plug the grinder back in and use as needed.

3. Press the Start/Stop button to start the grinding process. The unit will automatically stop when the selected volume of coffee grounds have been reached.
4. You may also stop the grinding process at anytime by pressing the Start/Stop button again at any point in the grinding cycle.

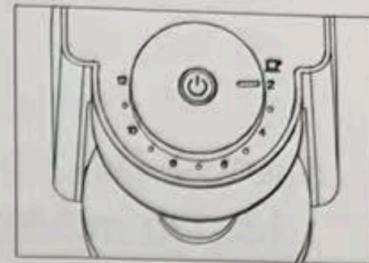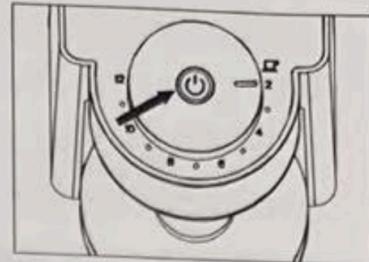

## COFFEE GRINDER USAGE TIPS

1. Freshly ground coffee is the key to making coffee with more flavor and body (So use fresh coffee beans every time for the best outcome).
2. Use freshly roasted coffee beans that have been given a roasted on date that has not expired or has been roasted that day to maximize the flavor.
3. Use coffee beans between 5 and 20 days after the 'roasted on' date for optimal freshness.
4. Coffee flavor and strength is a personal preference. It is best to vary the type of coffee beans, amount of coffee and fineness of the grind to achieve the preferred taste.
5. Fresh beans will yield the best flavor and aroma.
6. For the freshest, most flavorful cup of coffee, grind only enough coffee for the pot you are brewing. If you are brewing a large pot, you may need to grind coffee beans in several batches.
7. Continue grinding until desired. A fine grind exposes more surface to the water and therefore a more rapid rate of extraction of flavor.
8. A coarser grind, which exposes little surface, is appropriate for the longer brewing cycle of percolators.
9. IMPORTANT: Experimenting with the length of grind time will enable you to get exactly the grind you prefer for your coffee.
10. Store coffee beans in a dark, cool and dry place. Vacuum seal them if possible.
11. Buy whole beans in small batches to reduce the storage time of the coffee beans.
12. Once the coffee is ground, it quickly loses its flavor and aroma. For the best results, grind the beans immediately before brewing.

13. When storing the appliance, run the grinder until it is empty to clear the ground beans left in the chamber.
14. Run the grinder for 10-15 seconds to purge out any leftover coffee grounds before each use, for maximum freshness.
15. Clean the bean hopper and conical burrs regularly.
16. You can change the grind size while the Coffee Grinder is running.
17. All users of this appliance must read and understand this owner's manual before operating or cleaning this appliance.
18. Do not leave this appliance unattended during use.
19. If this appliance begins to malfunction during use, immediately re-press the ON/OFF button and unplug the cord. Do not use or attempt to repair the malfunctioning appliance. A damaged appliance may cause serious personal injury, start fires, or cause property damage.
20. If this appliance falls or accidentally becomes immersed in water, unplug it immediately. Do not reach into the water! Do not use this appliance after it has fallen into or becomes immersed in water, unplug it immediately. Do not reach into the water due to the danger of electrocution.
21. To reduce the risk of injury to persons or property, never use this appliance in an unstable position.
22. The blade is very sharp and can cause injury if touched.
23. This coffee grinder is intended for processing beans and spices.
24. Never use for extended periods of time.
25. Do not operate the coffee grinder without the lid in place.
26. Do not use if the lid is cracked or chipped.
27. An extension cord is not recommended for use with this product.

## GRINDING SPICES

Spices pack more flavor when freshly ground. It is recommended to grind only spice seeds such as peppercorn, mustard seeds, coriander seeds etc. Follow the same instructions as listed for grinding coffee beans.

### Not Recommended

- This coffee grinder WILL NOT GRIND anything which is moist, gummy or extremely hard: ice, chocolate, whole nutmeg, candied ginger, etc.
- This coffee grinder will NOT make pastes of any kind from seeds such as sunflower or sesame.
- Never add oils or liquids while grinding.

- Grains such as corn,wheat,rice,barley,and rye may cause damage to the lid.
- Chopping,mincing or pureeing of soft foods is not recommended

## CLEANING AND MAINTENANCE

### CLEANING THE COFFEE GRINDER

NOTE:Always unplug your Coffee Grinder after use and before cleaning.



IMPORTANT: To avoid damage,never wash or immerse the main body of the coffee grinder, burrs, or power cord in water, or place it into the dishwasher.

1. The bean hopper, bean hopper lid, holder,grinding chamber and the grinding chamber lid can be cleaned with warm soapy water, then rinse and dry them thoroughly. Never use abrasive cleansers, steel wool pads or other abrasive materials (THIS UNIT IS NOT DISHWASHER SAFE).
- 2.Wipe the body of the coffee grinder with a soft, damp cloth,then dry thoroughly with a soft dry cloth.

### CLEANING THE BURRS



If the Coffee Grinder is used frequently, the burrs should be cleaned regularly for the best performance. This is especially important when grinding in order to make espressos. Cleaning enables the burrs to achieve the finest, most consistent grinds possible every time.

1. Empty the Grinding Chamber then remove the lid and the Grinding Chamber.(as shown in the provided image).
- 2.Remove the upper burr.
- 3.Clean the upper burr with the cleaning brush.
- 4.Clean the lower burr with the cleaning brush or use a vacuum cleaner to remove any coffee ground residue.

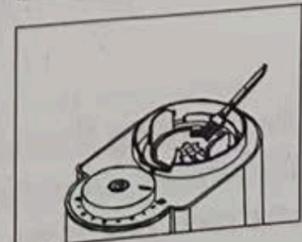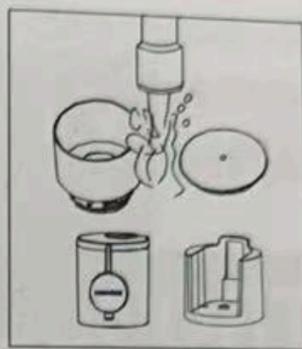

5. Install the upper burr into the correct position. Align the round icon ▼ on the burr with the icon ■ on the base (as shown in the provided image).

6. Install the bean hopper and bean hopper lid into the correct position (as shown in the provided image).

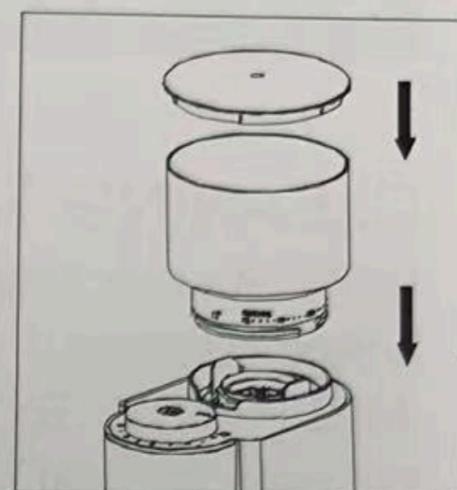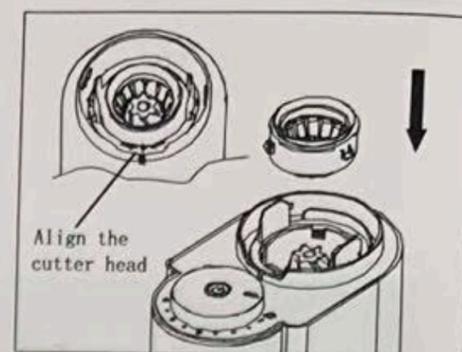

## User Maintenance Instruction Notes

This appliance requires little maintenance. It contains no user-serviceable parts. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

## TROUBLESHOOTING GUIDE

Problem	Possible Causes and Solutions
The appliance does not work (or is not getting adequate power to function).	<p>Check the electrical connection.</p> <ul style="list-style-type: none"> <li>·If you have a circuit breaker box, make sure that there is a closed circuit and if you have a fuse box, a fuse may need to be replaced. Try unplugging the Coffee Grinder, then plug it back in.</li> <li>·The appliance has overheated. Unplug the grinder from the wall outlet and allow it to cool for at least an hour. Then plug grinder back in and use as needed.</li> </ul>
No coffee grounds are being dispensed	<ul style="list-style-type: none"> <li>·Check the cup selection dial, turn the dial clockwise to set the desired number of cups.</li> <li>·The coffee hopper might not be correctly set, please refer to the "ASSEMBLY" instructions.</li> <li>·The burrs require cleaning or are worn. Refer to "CLEANING AND MAINTENANCE" section for detailed information on cleaning the burrs.</li> </ul>
The appliance has stopped during operation.	<p>Immediately turn off the unit. The coffee beans may have jammed the burrs. Refer to the "CLEANING AND MAINTENANCE" section for detailed information on cleaning the burrs.</p>
The Porta-Filter is overfilled with coffee grounds.	<p>It is normal for the correct amount of coffee to appear to be overfilled in your Porta-Filter. Un-tamped coffee grounds are approximately three times the volume of tamped coffee grounds.</p>
The grinding fineness adjustment selector no longer functions properly.	<p>Check that the upper burr is correctly positioned.</p>

## STORAGE INSTRUCTIONS

1. Unplug the coffee grinder. Store in its box or in a clean, dry place.  
**WARNING:** Never store the coffee grinder while it is plugged in.
2. Do not put any stress on the cord where it enters the unit, as this could cause cord to fray and/or break.

## RECYCLING & ENVIRONMENTALLY FRIENDLY DISPOSAL



In order to protect the environment, after the expiration of the products service life, it should not be discarded in the same way as domestic garbage; please recycle at a professional recycling center. The waste generated during the process of coffee making

should be collected and processed in accordance with the prescribed methods in your area.

For further information on the recycling of this product, please consult your local municipality, processing service center, or the store where you purchased the product.

The manufacturer reserves the right to change the design, structure and specifications that do not affect the general principles of operation for the product without prior notice, so there is no significant differences between the manual and the product.

You can help protect the environment! Please remember to respect the local regulations, and hand in the non-working electrical equipment to an appropriate waste disposal center.

## SERVICE GUARANTEE

This product offers the following services such as "Repairs", "Returns" and "Replacement". The product is guaranteed by the seller for one year in accordance with national regulations from the date of purchase. This only applies to any component that is damaged under normal use within one year, users must provide the product's warranty card and invoice to acquire repairs. The after-sales service department will carry out the maintenance. (This product is for home use only and cannot be used for commercial purposes.)

The warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use of the product, use of improper voltage or current, improper routine maintenance, use contrary to the operating instructions, disassembly, repair, or alteration by anyone other than qualified personnel. Also, the warranty does not cover Acts of God such as fire, floods, hurricanes, or tornadoes. Our company shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Apart from the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in time to the duration of the warranty.

# WHAT THE WARRANTY COVERS & HOW TO CLAIM ITS BENEFITS

EN

- \*If the product is damaged under normal use;
- \*To be eligible for any repairs, you must hold valid purchase invoice and warranty card;
- \*The warranty period will endure for less than two years;
- \* Our customer service center is always eager to serve you.

## LIMITED ONE (1) YEAR WARRANTY

### For Servicing and Returns:

The warranty is only valid for a period of one YEAR from the date originally purchased , this warranty is from mechanical defects in material only and is not transferable. Keep the original sales receipt, as proof of purchase it is required to obtain the benefits of the warranty.

1. Thank you for choosing this Hubo product. Before use, please read the user manual carefully and keep it for future reference.
2. We hope you enjoy your appliance for many years. Should you have a problem with your appliance please e-mail our Service Department.
3. If you have any questions or suggestions, please feel free to contact Hubo.