

电熨斗 使用说明书



尊敬的用户:
真诚的感谢您购买本公司产品。为让您能正确地使用本产品,
请在使用前详细阅读此说明书。

产品名称: 电熨斗	型号	功率	电压	频率
执行标准: GB 4706.2-2007 GB 4706.1-2005 GB 17625.1-2022 GB 4343.1-2018	K1, K2	40W	220~	50Hz
	K3, K5	35W	220~	50Hz
	K6, K7	30W	220~	50Hz
	K8, K9	25W	220~	50Hz

使用方法:

- 使用前请用量杯加水。
- 接上电源, 加热15秒后可以使用。
- 在需要烫的地方先喷适量的水, 再熨烫平整。
- 使用完毕, 拔掉电源即可。
- 机身里剩下的水清理出来。
- 发热面板冷却后再可收纳起来。

使用须知:

- 使用前请先检查本产品所需电压是否与您家中的电压相符。如果产品带有接地插头, 则必须将其插至接地线的插座。
- 请按照产品设计功能使用。不要在规定使用范围外使用本产品。
- 产品禁止肢体上、精神上有缺陷或缺相关操作经验的人群使用, 除非是在对其安全负责的人的指导和监督下使用。
- 产品禁止儿童使用, 请勿让儿童玩耍本产品。
- 当电熨斗温度没有冷却时, 不可放置在儿童能接触到的地方。在儿童附近使用时, 请小心看护好儿童。
- 切勿将熨斗或其他污垢清洁剂倒入储水箱内。
- 禁止使用化学添加剂、香精或除垢剂。
- 使用后临时停止工作时, 也要将电熨斗放在底座上, 然后将电源插头拔出。
- 插入或拔出插头前, 请将开关置于关闭处。使用时请勿猛拉电源线, 要切断电源时应抓住插头拔出电源。
- 请勿将电熨斗浸入水中或其他液体中。
- 禁止手湿使用本产品。
- 禁止将本产品淋雨或暴晒。
- 使用时请勿碰触发热面板, 防止烫伤。
- 电熨斗温度很高, 为避免烫伤, 请勿将机器直对人体使用。

注意事项:

- 在电熨斗接通电源期间, 使用者不得离开。
- 在给水箱充水前, 必须将电熨斗电源插头从插座上拔掉。
- 电熨斗必须在稳定的表面上使用和搁置。
- 当电熨斗放置在其支架上时, 应确保支架已放在稳定的表面上。
- 如果电熨斗发生跌落、有可见的损坏迹象或有渗漏现象, 则这个电熨斗不能使用。
- 假如电熨斗的电源线损坏或出现其它故障, 为了避免危险, 必须由制造商、其维修部或类似部门的专业人员进行更换。

衣物纤维及熨衣方式:

- 对于热敏感的布料, 应垫布在衣物上熨烫, 以免变形或损坏。
- 熨烫混纺衣物时, 应根据耐热性较差的纤维来选择温度。
- 熨烫不同布料的衣物时, 先熨烫耐热性较差的衣物。

保养方法:

- 用软布擦拭电熨斗底部及其他部位。
- 当产品出现较严重的污渍时, 切勿用水直接清洗, 可用软布沾中性洗涤剂擦拭。
- 对于任何粘附在底板上的沉淀物、淀粉物质均可以用湿布或不含磨砂性的液态清洁剂清洗。
- 避免使用铁丝或带金属类洁具擦拭面板, 塑料部件可用湿布清洁后, 用布擦拭干净。
- 关闭电源开关, 待电熨斗充分冷却后将电熨斗倒置。

警告:

- 产品使用时请勿触摸发热板区域, 以免烫伤。
- 产品使用后需关闭电源, 远离易燃易爆物。



Electric Iron Instruction Manual



Dear Customers:
Thanks for purchasing our products, please kindly read this manual carefully
before use for the correct means.

Product name: Electric Iron	Product model	Rated power	Rated voltage	Rated frequency
Execution standards GB 4706.2-2007 GB 4706.1-2005 GB 17625.1-2022 GB 4343.1-2018	K1, K2	40W	220~	50Hz
	K3, K5	35W	220~	50Hz
	K6, K7	30W	220~	50Hz
	K8, K9	25W	220~	50Hz

Methods of Use:

- Use a measuring cup to add water before use.
- Connect to the power supply and wait for 15 seconds to heat up before use.
- Spray a suitable amount of water on the area that needs to be ironed for flattening.
- After use, unplug the power.
- Clean out the remaining water inside the fuselage.
- Store it after the heating panel has cooled down.

Instructions for use:

- Before use, please check if the required voltage matches the voltage in your home. If the product has a grounding plug, it must be plugged into a grounded outlet.
- Please use this product according to designed functions and do not use it outside of the specified usage range.
- The product is prohibited for use by individuals with physical or mental disabilities or those lacking relevant operational experience, unless under the guidance and supervision of a responsible person for their safety.
- This product is prohibited for use by children. Please do not let children play with this product.
- Do not place the electric iron in an area accessible to children when the electric iron temperature has not cooled down. Please be careful and take good care of children when using.
- Do not pour vinegar or other cleaning agents into the water storage tank.
- Do not use chemical additives, fragrances, or descaling agents.
- When temporarily stopping the operation after use, place the electric iron on the base and then unplug the power plug.
- Please turn off the switch before inserting or removing the plug. Do not pull the power cord forcefully in use. When cutting off the power, please hold the plug and pull it out.
- Do not immerse the electric iron in water or any other liquid.
- Do not use this product with wet hands.
- Do not expose this product to rain or direct sunlight.
- Please do not touch the hot plate when using to prevent burns.
- For the high temperature of the electric iron, please do not use the machine directly on the human body to avoid burns.

Notes:

- Do not leave during the power-on period.
- Before adding water to the water tank, the power plug of the electric iron must be unplugged from the socket.
- The electric iron must be used and placed on a stable surface.
- When the electric iron is placed on the bracket, make sure that the surface of the bracket is stable and reliable.
- Do not use the product if it has been dropped or if visible damage or leakage has occurred.
- If the power cord is damaged, please stop using it immediately to avoid danger. replacement must be carried out by professionals from the manufacturer's maintenance department or similar department.

Clothing Fibers and Ironing Methods:

- For heat-sensitive fabrics, a cloth should be placed on top of the garment when ironing to prevent deformation or damage.
- When ironing blended fabrics, the temperature should be selected based on the fiber with lower heat resistance.
- When ironing different fabrics, start by ironing the ones with lower heat resistance.

Maintenance Method:

- Use a soft cloth to wipe the bottom and other parts of the electric iron.
- When the product has severe stains, do not wash it directly with water, but use a soft cloth dampened with a neutral detergent to wipe it.
- Any sediment or starch substance adhered to the bottom plate can be cleaned with a damp cloth or a liquid cleaner that does not contain abrasive properties.
- Avoid using wire or metal cleaning tools to wipe the bottom plate. Clean up plastic parts with a damp cloth and then wipe dry with a cloth.
- Turn off the power switch and wait for the electric iron to cool down completely before turning it upside down.

Warnings:

- Please do not touch the heated plate area while using the product to avoid burns.
- Please turn off the power and keep away from flammable and explosive materials after use.



electric iron
user's Guide



respected user:
Sincerely thank you for purchasing our products. In order to enable you to use this product correctly,
Please read this manual carefully before use.

Product name: Electric iron	model	power	Voltage	frequency
	K1, K2	40W	220~	50Hz
Implementation standards:	K3, K5	35W	220~	50Hz
GB 4706.2-2007 GB 4706.1-2005	K6, K7	30W	220~	50Hz
GB 17625.1-2022 GB 4343.1-2018	K8, K9	25W	220~	50Hz

- Instructions:
- Please add water to the measuring cup before use.
 - Connect the power supply and heat for 15 seconds before use.
 - Spray an appropriate amount of water on the areas that need ironing, and then iron them flat.
 - When you are finished using, just unplug the power cord.
 - Clean out the remaining water in the fuselage.
 - The heating panel can be stored away after it cools down.

- Terms and Conditions:
- Before use, please check whether the voltage required by this product is consistent with the voltage in your home.
 - If the product has a grounding plug, it must be plugged into a grounded outlet.
 - Please use the product according to its designed functions and do not use it outside the specified scope of use.
 - The product is prohibited to be used by people with physical or mental disabilities or lack of relevant operating experience, except unless used under the guidance and supervision of a person responsible for its safety.
 - This product is not allowed to be used by children. Please do not let children play with this product.
 - When the iron is still hot, keep it out of the reach of children for the child
 - When using near children, please supervise them
 - Do not pour vinegar or other grime cleaners into the water tank.
 - No chemical additives, fragrances or descalers are allowed.
 - When you temporarily stop working after use, place the iron on the base and plug it in.
 - Head pulled out.
 - Before inserting or unplugging, turn the switch to the off position.
 - Turn off the power switch and wait for the iron to cool down sufficiently.
 - Turn the iron upside down.
 - Do not immerse the iron in water or other liquids.
 - Do not use this product with wet hands.
 - Do not expose this product to rain or sunlight.
 - Do not touch the hot panel during use to avoid burns.
 - The temperature of the electric iron is very high. To avoid burns, please do not use the machine directly against your body.

Precautions:

- The user must not leave the iron unattended while it is plugged in.
- Before filling the water tank, the iron must be unplugged from the socket.
- The iron must be used and stored on a stable surface.
- When the iron is placed on its stand, make sure the stand is on a stable surface.
- If the iron has been dropped, shows visible signs of damage or leaks, this The iron cannot be used.
- If the power cord of the iron is damaged or has other faults, to avoid danger, Replacement must be performed by qualified personnel from the manufacturer, its service department or similar department.

Clothing fibers and ironing methods:

- For heat-sensitive fabrics, place a cloth between the clothes and iron them to avoid deformation or damage.
- When ironing blended garments, choose the temperature based on the fibers that are less heat resistant.
- When ironing items of different fabrics, iron the items that are less heat resistant first.

Maintenance:

- Wipe the bottom and other parts of the iron with a soft cloth.
- When the product has serious stains, do not wash it directly with water. Wipe with neutral detergent.
- For any sediment adhering to the bottom plate, the bottom plate can be cleaned with a damp cloth or Clean with abrasive liquid detergent.
- Avoid using iron wire or golden sanitizing water to wipe the bottom plate. After cleaning, wipe clean with a cloth.
- Turn off the power switch and wait for the iron to cool down sufficiently.
- Turn the iron upside down.

Warning:

- Do not touch the heating plate area when using the product to avoid burns.
- After using the product, turn off the power and keep away from flammable and explosive materials.



Electric Iron
Instruction Manual



Dear Customers:
Thanks for purchasing our products, please kindly read this manual carefully before use for the correct means.

Product name: Electric Iron	Product model	Rated power	Rated voltage	Rated frequency
	K1, K2	40W	220~	50Hz
Execution standards	K3, K5	35W	220~	50Hz
GB 4706.2-2007 GB 4706.1-2005	K6, K7	30W	220~	50Hz
GB 17625.1-2022 GB 4343.1-2018	K8, K9	25W	220~	50Hz

Methods of Use:

- Use a measuring cup to add water before use.
- Connect to the power supply and wait for 15 seconds to heat up before use.
- Spray a suitable amount of water on the area that needs to be ironed for flattening.
- After use, unplug the power.
- Clean out the remaining water inside the fuselage.
- Store it after the heating panel has cooled down.

Instructions for use:

- Before use, please check if the required voltage matches the voltage in your home. If the product has a grounding plug, it must be plugged into a grounded outlet.
- Please use this product according to designed functions and do not use it outside of the specified usage range.
- The product is prohibited for use by individuals with physical or mental disabilities or those lacking relevant operational experience, unless under the guidance and supervision of a responsible person for their safety.
- This product is prohibited for use by children. Please do not let children play with this product.
- Do not place the electric iron in an area accessible to children when the electric iron temperature has not cooled down. Please be careful and take good care of children when using.
- Do not pour vinegar or other cleaning agents into the water storage tank.
- Do not use chemical additives, fragrances, or descaling agents.
- When temporarily stopping the operation after use, place the electric iron on the base and then unplug the power plug.
- Please turn off the switch before inserting or removing the plug. Do not pull the power cord forcefully in use. When cutting off the power, please hold the plug and pull it out.
- Do not immerse the electric iron in water or any other liquid.
- Do not use this product with wet hands.
- Do not expose this product to rain or direct sunlight.
- Please do not touch the hot plate when using to prevent burns.
- For the high temperature of the electric iron, please do not use the machine directly on the human body to avoid burns.

Notes:

- Do not leave during the power-on period.
- Before adding water to the water tank, the power plug of the electric iron must be unplugged from the socket.
- The electric iron must be used and placed on a stable surface.
- When the electric iron is placed on the bracket, make sure that the surface of the bracket is stable and reliable.
- Do not use the product if it has been dropped or if visible damage or leakage has occurred.
- If the power cord is damaged, please stop using it immediately to avoid danger. replacement must be carried out by professionals from the manufacturer's maintenance department or similar department.

Clothing Fibers and Ironing Methods:

- For heat-sensitive fabrics, a cloth should be placed on top of the garment when ironing to prevent deformation or damage.
- When ironing blended fabrics, the temperature should be selected based on the fiber with lower heat resistance.
- When ironing different fabrics, start by ironing the ones with lower heat resistance.

Maintenance Method:

- Use a soft cloth to wipe the bottom and other parts of the electric iron.
- When the product has severe stains, do not wash it directly with water, but use a soft cloth dampened with a neutral detergent to wipe it.
- Any sediment or starch substance adhered to the bottom plate can be cleaned with a damp cloth or a liquid cleaner that does not contain abrasive properties.
- Avoid using wire or metal cleaning tools to wipe the bottom plate. Clean up plastic parts with a damp cloth and then wipe dry with a cloth.
- Turn off the power switch and wait for the electric iron to cool down completely before turning it upside down.

Warnings:

- Please do not touch the heated plate area while using the product to avoid burns.
- Please turn off the power and keep away from flammable and explosive materials after use.



plancha electrica
guía de usuario



usuario respetado:
Sinceramente gracias por comprar nuestro producto. Para permitirle utilizar este producto correctamente,
Lea atentamente este manual antes de usarlo.

Table with 5 columns: Numero del producto, modelo, fuerza, Voltaje, frecuencia. It lists two models (K1, K2 and K6, K7) with their respective power, voltage, and frequency specifications.

- Instrucciones:
1. Utilice la taza medidora para agregar agua antes de usar.
2. Conecte la fuente de alimentación y caliéntela durante 15 segundos antes de usarla.
3. Rocíe una cantidad adecuada de agua en el área que necesita plancharse y luego plánela.
4. Después de su uso, simplemente desconecte la fuente de alimentación.
5. Limpia el agua restante en el fuselaje.
6. El panel calefactor se puede guardar después de que se enfríe.

- Términos y condiciones:
1. Antes de usarlo, verifique si el voltaje requerido por este producto coincide con el voltaje de su hogar. Si se produce un error, desconecte inmediatamente el producto y no lo use.
2. Si el producto tiene un enchufe con conexión a tierra, debe enchufarse a un tomacorriente con conexión a tierra. No use adaptadores de enchufe.
3. Este producto está diseñado para su uso en interiores y no debe usarse en exteriores.
4. Este producto está diseñado para su uso en interiores y no debe usarse en exteriores.
5. Cuando la plancha no se haya enfriado, no la coloque al alcance de los niños.
6. Cuando lo utilice cerca de niños, cúdelos.
7. No se permiten aditivos químicos, fragancias ni desincrustantes.
8. Cuando deje de trabajar temporalmente después de su uso, coloque la plancha en la base y luego enchufe la fuente de alimentación.
9. La cabeza se sacó.
10. Antes de insertar o desenchufar, coloque el interruptor en la posición de apagado.
11. No sumerja la plancha en agua u otros líquidos.
12. Está prohibido utilizar este producto con las manos mojadas.
13. No exponga este producto a la lluvia o a la luz solar.
14. No toque el panel calefactor durante el uso para evitar quemaduras.
15. La temperatura de la plancha eléctrica es muy alta. Para evitar quemaduras, no utilice la plancha directamente sobre el cuerpo humano.

- Precauciones:
1. El usuario no está permitido dejar la plancha mientras esté conectada a la corriente.
2. Antes de llenar el depósito de agua, es necesario desenchufar la plancha de la toma de corriente.
3. La plancha debe utilizarse y apoyarse sobre una superficie estable.
4. Al colocar la plancha sobre su soporte, asegúrese de que esté sobre una superficie estable.
5. Si la plancha se ha caído, tiene signos visibles de daño o tiene fugas, esto No se puede utilizar plancha eléctrica.
6. Si el cable de alimentación de la plancha eléctrica está dañado o no funciona correctamente, para evitar peligros, La sustitución debe ser realizada por personal cualificado del fabricante, su departamento de servicio o departamento similar.

- Fibras de ropa y métodos de planchado:
1. Para telas sensibles al calor, se debe colocar un paño encima de la ropa para evitar deformaciones o daños.
2. Al planchar prendas mezcladas, elija una temperatura basada en las fibras menos resistentes al calor.
3. Cuando planche ropa hecha de diferentes tejidos, planche primero la ropa con poca resistencia al calor.

- Mantenimiento:
1. Limpie la parte inferior y otras partes de la plancha con un paño suave.
2. Cuando el producto tenga manchas graves, no lo limpie directamente con agua. Utilice un paño suave para limpiarlo.
3. Limpie con detergente neutro.
4. Para posibles depósitos adheridos a la plancha, como almidón, se pueden eliminar con un paño húmedo o no abrasivo.
5. Limpie con detergente líquido abrasivo.
6. Evite el uso de alambre de hierro o artículos limpiadores similares para limpiar el panel.
7. Después de la limpieza, límpiolo con un paño.
8. Después de la limpieza, límpiolo con un paño.
9. La plancha está al revés.
10. Limpie el panel con un paño húmedo.

- Advertencia:
1. No toque el área de la placa calefactora cuando utilice el producto para evitar quemaduras.
2. El producto debe apagarse después de su uso y mantenerse alejado de materiales inflamables y explosivos.

Electric Iron
Instruction Manual



Dear Customers:
Thanks for purchasing our products, please kindly read this manual carefully before use for the correct means.

Table with 5 columns: Product name, Product model, Rated power, Rated voltage, Rated frequency. It lists two models (K1, K2 and K6, K7) with their respective power, voltage, and frequency specifications.

- Methods of Use:
1. Use a measuring cup to add water before use.
2. Connect to the power supply and wait for 15 seconds to heat up before use.
3. Spray a suitable amount of water on the area that needs to be ironed for flattening.
4. After use, unplug the power.
5. Clean out the remaining water inside the fuselage.
6. Store it after the heating panel has cooled down.

- Instructions for use:
1. Before use, please check if the required voltage matches the voltage in your home. If the product has a grounding plug, it must be plugged into a grounded outlet.
2. Please use this product according to designed functions and do not use it outside of the specified usage range.
3. The product is prohibited for use by individuals with physical or mental disabilities or those lacking relevant operational experience, unless under the guidance and supervision of a responsible person for their safety.
4. This product is prohibited for use by children. Please do not let children play with this product.
5. Do not place the electric iron in an area accessible to children when the electric iron temperature has not cooled down. Please be careful and take good care of children when using.
6. Do not pour vinegar or other cleaning agents into the water storage tank.
7. Do not use chemical additives, fragrances, or descaling agents.
8. When temporarily stopping the operation after use, place the electric iron on the base and then unplug the power plug.
9. Please turn off the switch before inserting or removing the plug. Do not pull the power cord forcefully in use. When cutting off the power, please hold the plug and pull it out.
10. Do not immerse the electric iron in water or any other liquid.
11. Do not use this product with wet hands.
12. Do not expose this product to rain or direct sunlight.
13. Please do not touch the hot plate when using to prevent burns.
14. For the high temperature of the electric iron, please do not use the machine directly on the human body to avoid burns.

- Notes:
1. Do not leave during the power-on period.
2. Before adding water to the water tank, the power plug of the electric iron must be unplugged from the socket.
3. The electric iron must be used and placed on a stable surface.
4. When the electric iron is placed on the bracket, make sure that the surface of the bracket is stable and reliable.
5. Do not use the product if it has been dropped or if visible damage or leakage has occurred.
6. If the power cord is damaged, please stop using it immediately to avoid danger. replacement must be carried out by professionals from the manufacturer's maintenance department or similar department.

- Clothing Fibers and Ironing Methods:
1. For heat-sensitive fabrics, a cloth should be placed on top of the garment when ironing to prevent deformation or damage.
2. When ironing blended fabrics, the temperature should be selected based on the fiber with lower heat resistance.
3. When ironing different fabrics, start by ironing the ones with lower heat resistance.

- Maintenance Method:
1. Use a soft cloth to wipe the bottom and other parts of the electric iron.
2. When the product has severe stains, do not wash it directly with water, but use a soft cloth dampened with a neutral detergent to wipe it.
3. Any sediment or starch substance adhered to the bottom plate can be cleaned with a damp cloth or a liquid cleaner that does not contain abrasive properties.
4. Avoid using wire or metal cleaning tools to wipe the bottom plate. Clean up plastic parts with a damp cloth and then wipe dry with a cloth.
5. Turn off the power switch and wait for the electric iron to cool down completely before turning it upside down.

- Warnings:
1. Please do not touch the heated plate area while using the product to avoid burns.
2. Please turn off the power and keep away from flammable and explosive materials after use.

elektrisches Bügeleisen
Bedienungsanleitung



Respektierter Benutzer:
Herzlichen Dank für den Kauf unseres Produkts, damit Sie dieses Produkt richtig verwenden können.
Bitte lesen Sie dieses Handbuch vor der Verwendung sorgfältig durch.

Produktname: Bügeleisen	Modell	Leistung	Stromspannung	Frequenz
Umsetzungsstandards:	K1, K2	40W	220~	50Hz
	K5, K6	35W	220~	50Hz
	K6, K7	30W	220~	50Hz
	K8, K9	25W	220~	50Hz

- Anweisungen:
- Bitte verwenden Sie den Messbecher, um vor der Verwendung Wasser hinzuzufügen.
 - Schließen Sie das Netzteil an und erhitzen Sie es vor dem Gebrauch 15 Sekunden lang.
 - Sprühen Sie eine angemessene Menge Wasser auf die zu bügelnde Stelle und bügeln Sie sie dann flach.
 - Nach dem Gebrauch einfach den Netzstecker ziehen.
 - Entfernen Sie das restliche Wasser im Rumpf.
 - Das Heizpanel kann nach dem Abkühlen gelagert werden.

- Geschäftsbedingungen:
- Bitte prüfen Sie vor der Verwendung, ob die vom diesem Produkt benötigte Spannung mit der Spannung in Ihrem Zuhause übereinstimmt. Falls produziert wird, wird das Produkt über einen Erdungsstecker verfügt, muss dieser an eine geeignete Steckdose angeschlossen werden.
 - Bitte verwenden Sie es entsprechend der Produktanweisungen und vermeiden Sie dieses Produkt nicht außerhalb des angegebenen Verwendungsbereichs.
 - Die Verwendung dieses Produkts durch Kinder ist verboten. Bitte lassen Sie Kinder nicht mit diesem Produkt spielen.
 - Es ist verboten, die Verwendung erfolgt unter Aufsicht und Aufsicht einer für die Sicherheit verantwortlichen Person.
 - Bei Verwendung dieses Produkts durch Kinder ist verboten. Bitte lassen Sie Kinder nicht mit diesem Produkt spielen.
 - Wenn das Bügeleisen nicht abgekühlt ist, platzieren Sie es nicht in der Reichweite von Kindern.
 - Wenn Sie das Gerät in der Nähe von Kindern verwenden, achten Sie bitte auf diese.
 - Gießen Sie niemals Essig oder andere Schmutzreiner in den Wassertank.
 - Es sind keine chemischen Zusätze, Duftstoffe oder Entkalker erlaubt.
 - Beenden Sie die Arbeit nach dem Gebrauch vollständig abbrechen, stellen Sie das Bügeleisen auf die Basis und schließen Sie es daran an die Stromquelle an.
 - Kopf herausgezogen.
 - Stellen Sie den Schalter vor dem Einstecken oder Herausziehen auf die Aus-Position.
 - Das Bügeleisen sollte nicht in Wasser oder andere Flüssigkeiten tauchen.
 - Es ist verboten, dieses Produkt mit nassen Händen zu verwenden.
 - Setzen Sie dieses Produkt weder Regen noch Sonnenlicht aus.
 - Bürstchen Sie das Heizpanel während des Gebrauchs nicht, um Verbrennungen zu vermeiden.
 - Die Temperatur des Bügeleisens ist sehr hoch, um Verbrennungen zu vermeiden. Benutzen Sie das Gerät nicht direkt am menschlichen Körper.
 - Das Bügeleisen ist sehr heiß, um Verbrennungen zu vermeiden. Benutzen Sie das Gerät nicht direkt am menschlichen Körper.

- Vorsichtsmaßnahmen:
- Der Benutzer darf das Bügeleisen nicht verlassen, solange es an die Stromversorgung angeschlossen ist.
 - Vor dem Befüllen des Wassertanks muss das Bügeleisen aus der Steckdose gezogen werden.
 - Das Bügeleisen muss auf einer stabilen Oberfläche verwendet und abgestellt werden.
 - Stellen Sie beim Aufstellen des Bügeleisens sicher, dass der Ständer auf einer stabilen Oberfläche steht.
 - Wenn das Bügeleisen heruntergefallen ist, sichtbare Beschädigungen aufweist oder undicht ist, ist dies der Fall. Ein elektrisches Bügeleisen kann nicht verwendet werden.
 - Wenn das Netzkabel des Bügeleisens beschädigt ist oder eine andere Fehlfunktion aufweist, vermeiden Sie Gefahren. Der Austausch muss von qualifiziertem Personal des Herstellers, seiner Serviceabteilung oder einer ähnlichen Abteilung durchgeführt werden.

- Kleidungsfasern und Bügelmethoden:
- Bei hitzeempfindlichen Stoffen sollte ein Tuch über die Kleidung gelegt werden, um Verformungen oder Beschädigungen zu vermeiden.
 - Wählen Sie beim Bügeln von Mischgewebe eine Temperatur, die sich an den weniger hitzebeständigen Fasern orientiert.
 - Wenn Sie Kleidung aus verschiedenen Stoffen bügeln, bügeln Sie zuerst die Kleidung mit geringer Hitzebeständigkeit.

- Wartung:
- Wischen Sie die Unterseite und andere Teile des Bügeleisens mit einem weichen Tuch ab.
 - Wenn das Produkt starke Flecken aufweist, reinigen Sie es nicht direkt mit Wasser. Verwenden Sie zum Reinigen ein weiches Tuch. Mit neutralem Reinigungsmittel abwischen.
 - Eventuell an der Grundplatte vorhandene Ablagerungen können mit einem feuchten Tuch entfernt werden oder nicht. Mit flüssigem Scheuermittel reinigen.
 - Vermeiden Sie die Verwendung von Eisen draht oder Stahlwolle, um die Unterseite der Grundplatte zu reinigen. Wischen Sie es nach der Reinigung mit einem Tuch sauber.
 - Streichen Sie den Netzstecker aus und warten Sie, bis das Bügeleisen vollständig abgekühlt ist.

- Warnung:
- Berühren Sie bei der Verwendung des Produkts nicht den Bereich der Heizplatte, um Verbrennungen zu vermeiden.
 - Das Produkt muss nach Gebrauch ausgeschaltet und von brennbaren und explosiven Materialien ferngehalten werden.

Electric Iron
Instruction Manual



Dear Customers:
Thanks for purchasing our products, please kindly read this manual carefully before use for the correct means.

Product name: Electric Iron		Product model	Rated power	Rated voltage	Rated frequency
		K1, K2	40W	220~	50Hz
Execution standards		K3, K5	35W	220~	50Hz
GB 4706.2-2007	GB 4706.1-2005	K6, K7	30W	220~	50Hz
GB 17625.1-2022	GB 4343.1-2018	K8, K9	25W	220~	50Hz

- Methods of Use:
- Use a measuring cup to add water before use.
 - Connect to the power supply and wait for 15 seconds to heat up before use.
 - Spray a suitable amount of water on the area that needs to be ironed for flattening.
 - After use, unplug the power.
 - Clean out the remaining water inside the fuselage.
 - Store it after the heating panel has cooled down.
- Instructions for use:
- Before use, please check if the required voltage matches the voltage in your home. If the product has a grounding plug, it must be plugged into a grounded outlet.
 - Please use this product according to designed functions and do not use it outside of the specified usage range.
 - The product is prohibited for use by individuals with physical or mental disabilities or those lacking relevant operational experience, unless under the guidance and supervision of a responsible person for their safety.
 - This product is prohibited for use by children. Please do not let children play with this product.
 - Do not place the electric iron in an area accessible to children when the electric iron temperature has not cooled down. Please be careful and take good care of children when using.
 - Do not pour vinegar or other cleaning agents into the water storage tank.
 - Do not use chemical additives, fragrances, or descaling agents.
 - When temporarily stopping the operation after use, place the electric iron on the base and then unplug the power plug.
 - Please turn off the switch before inserting or removing the plug. Do not pull the power cord forcefully in use. When cutting off the power, please hold the plug and pull it out.
 - Do not immerse the electric iron in water or any other liquid.
 - Do not use this product with wet hands.
 - Do not expose this product to rain or direct sunlight.
 - Please do not touch the hot plate when using to prevent burns.
 - For the high temperature of the electric iron, please do not use the machine directly on the human body to avoid burns.

- Notes:
- Do not leave during the power-on period.
 - Before adding water to the water tank, the power plug of the electric iron must be unplugged from the socket.
 - The electric iron must be used and placed on a stable surface.
 - When the electric iron is placed on the bracket, make sure that the surface of the bracket is stable and reliable.
 - Do not use the product if it has been dropped or if visible damage or leakage has occurred.
 - If the power cord is damaged, please stop using it immediately to avoid danger. replacement must be carried out by professionals from the manufacturer's maintenance department or similar department.

- Clothing Fibers and Ironing Methods:
- For heat-sensitive fabrics, a cloth should be placed on top of the garment when ironing to prevent deformation or damage.
 - When ironing blended fabrics, the temperature should be selected based on the fiber with lower heat resistance.
 - When ironing different fabrics, start by ironing the ones with lower heat resistance.

- Maintenance Method:
- Use a soft cloth to wipe the bottom and other parts of the electric iron.
 - When the product has severe stains, do not wash it directly with water, but use a soft cloth dampened with a neutral detergent to wipe it.
 - Any sediment or starch substance adhered to the bottom plate can be cleaned with a damp cloth or a liquid cleaner that does not contain abrasive properties.
 - Avoid using wire or metal cleaning tools to wipe the bottom plate. Clean up plastic parts with a damp cloth and then wipe dry with a cloth.
 - Turn off the power switch and wait for the electric iron to cool down completely before turning it upside down.

- Warnings:
- Please do not touch the heated plate area while using the product to avoid burns.
 - Please turn off the power and keep away from flammable and explosive materials after use.



fer électrique

guide de l'utilisateur



Merci sincèrement d'avoir acheté notre produit. Afin de vous permettre d'utiliser ce produit correctement

Veuillez lire attentivement ce manuel avant utilisation.

Nom du produit : fer à repasser électrique.	modèle	pouvoir	Tension	fréquence
Normes de mise en œuvre :	K1, K2	40W	220~	50Hz
	K3, K4	35W	220~	50Hz
	K6, K7	30W	220~	50Hz
	K8, K9	25W	220~	50Hz

Instructions:

1. Veuillez utiliser la tasse à mesurer pour ajouter de l'eau avant utilisation.
2. Connectez l'alimentation électrique et chauffez-la pendant 15 secondes avant utilisation.
3. Vaporisez une quantité appropriée d'eau sur la zone à repasser, puis repassez-la à plat.
4. Après utilisation, débranchez simplement l'alimentation.
5. Nettoyez l'eau restante dans le fuselage.
6. Le panneau chauffant peut être stocké une fois refroidi.

Termes et conditions:

1. Avant utilisation, veuillez vérifier si la tension requise pour le produit correspond à la tension de votre maison. Si possible, le produit est équipé d'un interrupteur de tension pour vous permettre de sélectionner la tension requise.
 2. Si le produit est équipé d'une fonction de mise à la mise à la terre, il est interdit de brancher sur une prise mise à la terre. (Cela évite d'endommager la fonction de mise à la terre du produit et de provoquer un incendie ou un choc électrique accidentel.)
 3. Ne touchez pas les parties métalliques du produit.
 4. Arrêtez d'utiliser le produit si vous ne savez pas la direction et la surveillance d'un produit responsable de sa sécurité. Le produit est interdit aux enfants. Veuillez ne pas laisser les enfants jouer avec le produit.
 5. Lorsque le fer n'a pas refroidi, ne le placez pas à la portée des enfants.
 6. Lorsque l'unité est utilisée à proximité d'enfants, les enfants ne peuvent pas toucher le produit.
 7. Ne versez jamais de vinaigre ou d'autres rétroajustements pour saletés dans le réservoir d'eau.
 8. Avec un additif chimique, parfum ou détartrant n'est autorisé.
 9. Lancez une alarme temporellement le plus tôt après utilisation, placez le fer sur la base, puis branchez la source d'alimentation.
 10. Tête arrachée.
 11. Avant d'insérer ou de débrancher, placez l'interrupteur en position d'arrêt.
Pour couper l'alimentation, laissez la fiche et retirez l'alimentation.
 12. Ne plongez pas le fer dans l'eau ou d'autres liquides.
 13. Il est interdit d'utiliser ce produit avec des mains mouillées.
 14. N'exposez pas ce produit à la pluie ou au soleil.
 15. Ne touchez pas le panneau chauffant pendant l'utilisation pour éviter les brûlures.
- La température du détartrant est très élevée. Pour éviter les brûlures, n'allouez pas la machine directement contre le corps humain.

Précautions:

1. L'utilisateur n'est pas autorisé à quitter le fer lorsqu'il est connecté à l'alimentation électrique.
2. Avant de remplir le réservoir d'eau, le fer doit être débranché de la prise.
3. Le fer doit être utilisé et posé sur une surface stable.
4. Lorsque vous placez le fer sur son support, assurez-vous que le support se trouve sur une surface stable.
5. Si le fer est tombé, présente des signes visibles de dommages ou s'il fuit, cela
Un fer à repasser électrique ne peut pas être utilisé.
6. Si le cordon d'alimentation du fer électrique est endommagé ou présente un dysfonctionnement, afin d'éviter tout danger, le remplacement doit être effectué par du personnel qualifié du fabricant, de son service après-vente ou d'un service similaire.

Fibres vestimentaires et méthodes de repassage :

1. Pour les tissus sensibles à la chaleur, un chiffon doit être placé sur le vêtement pour éviter toute déformation ou dommage.
2. Lorsque vous repassez des vêtements mélangés, choisissez une température basée sur les fibres les moins résistantes à la chaleur.
3. Lorsque vous repassez des vêtements faits de tissus différents, repassez d'abord les vêtements ayant une faible résistance à la chaleur.

Entretien:

1. Essuyez le bas et les autres parties du fer avec un chiffon doux.
2. Lorsque le produit présente des tâches importantes, ne le nettoyez pas directement avec de l'eau. Utilisez un chiffon doux pour le nettoyer.
Essuyer avec un détergent neutre.
3. Pour tout dépôt collé sur la plaque de base, les débris secs et les résidus féculents peuvent être éliminés avec un chiffon humide ou non humide avec un détergent liquide abrasif.
4. Évitez d'utiliser du fil de fer ou des articles similaires en métal pour essuyer le plateau nettoyé. Après le nettoyage, essuyez-le avec un chiffon.

5. Le fer est retourné.

 Avertissement :

1. Ne touchez pas la zone de la plaque chauffante lorsque vous utilisez le produit pour éviter les brûlures.
2. Le produit doit être éteint après utilisation et tenu à l'écart des matières inflammables et explosives.

Electric Iron Instruction Manual



Dear Customers:
Thanks for purchasing our products, please kindly read this manual carefully before use for the correct means.

Product name: Electric Iron	Product model	Rated power	Rated voltage	Rated frequency
Execution standards GB 4706.2-2007 GB 4706.1-2005 GB 17625.1-2022 GB 4343.1-2018	K1, K2	40W	220~	50Hz
	K3, K5	35W	220~	50Hz
	K6, K7	30W	220~	50Hz
	K8, K9	25W	220~	50Hz

Methods of Use:

1. Use a measuring cup to add water before use.
2. Connect to the power supply and wait for 15 seconds to heat up before use.
3. Spray a suitable amount of water on the area that needs to be ironed for flattening.
4. After use, unplug the power.
5. Clean out the remaining water inside the fuselage.
6. Store it after the heating panel has cooled down.

Instructions for use:

1. Before use, please check if the required voltage matches the voltage in your country.
If the product has a grounding plug, it must be plugged into a grounded outlet.
2. Please use this product according to designed functions and do not use it outside of the specified usage range.
3. Please do not use this product by individuals with physical or mental disabilities or those lacking relevant operational experience, unless under the guidance and supervision of a responsible person for their safety.
4. Please do not use this product for use by children. Please do not let children play with this product.
5. Do not place the electric iron in area accessible to children when this product is plugged into the power cord for the power cord.
6. Please be careful and take care when using the product to avoid any good care of children when using.
7. Do not pour vinegar or other cleaning agents into the water storage tank.
8. Please do not use the product for long time when the iron is not used.
9. When temporarily stopping the operation after use, place the electric iron on the base and then unplug the power plug.
10. Do not pull out the switch before inserting or removing the plug, do not pull out the power cord forcefully from use. When cutting off the power, please hold the plug and pull it out.
11. Do not immerse the electric iron in water or any other liquid.
12. Do not use the product in the following circumstances:
 - 12.1 Do not use the product in the rain or under the rain.
 - 12.2 Do not use the product to power rain or direct sunlight.
13. Please do not touch the hot plate when using to prevent burns.
14. For the high temperature ironing, please do not use the machine directly on the human body to avoid burns.

Notes:

1. Do not leave during the power-on period.
2. Before adding water to the water tank, the power plug of the electric iron must be unplugged from the socket.
3. The electric iron must be used and placed on a stable surface.
4. When the electric iron is placed on the bracket, make sure that the surface of the bracket is stable and ready to use.
5. Do not use the product if it has been dropped or if visible damage or leakage has occurred.
6. If the power cord is damaged, please stop using it immediately to avoid danger. Replacement must be carried out by professionals from the manufacturer's maintenance department or similar department.

Clothing Fibers and Ironing Methods:

1. For heat-sensitive fabrics, a cloth should be placed on top of the garment when ironing to prevent deformation or damage.
2. When ironing blended fabrics, the temperature should be selected based on the fiber with lower heat resistance.
3. When ironing different fabrics, start by ironing the ones with lower heat resistance.

Maintenance Method:

1. Use a soft cloth to wipe the bottom and other parts of the electric iron.
2. When the product has severe stains, do not wash it directly with water, but use a soft cloth dampened with a neutral detergent to wipe it.
3. Any sediment or starch substance adhered to the bottom plate can be cleaned with a damp cloth or a liquid cleaner that does not contain abrasive properties.
4. Avoid using wire or metal cleaning tools to wipe the bottom plate. Clean up plastic parts with a damp cloth and then wipe dry with a cloth.
5. Turn off the power switch and wait for the electric iron to cool down completely before turning it upside down.

 Warnings:

1. Please do not touch the heated plate area while using the product to avoid burns.
2. Please turn off the power and keep away from flammable and explosive materials after use.

電気アイロン ユーザーガイド



尊敬されるユーザー：
本製品を正しくご使用いただくために、誠にありがとうございます。
ご使用前にこの説明書をよくお読みください。

製品名:電気アイロン	モデル	力	電圧	頻度
実装基準:	K1, K2	40W	220~	50Hz
	K3, K5	35W	220~	50Hz
	K6, K7	30W	220~	50Hz
	K8, K9	25W	220~	50Hz

説明書:

- 計量カップを使用して水を加えてからご使用ください。
- 電源を接続し、15秒間加熱してから使用してください。
- アイロンがけが必要な部分に適量の水をスプレーし、平らにアイロンをかけてください。
- 使用後は電源プラグを抜くだけです。
- 機体に残った水を掃除してください。
- ヒーターパネルは冷めてから保管できます。

利用規約:

- ご使用前に、本製品に必要な電圧がご家庭の電圧と一致しているかご確認ください。生産された場所や電圧が異なる地域でのご使用は、保証の対象外となります。
- 製品に接地プラグが付いている場合は、接地されたコンセントに差し込む必要があります。製品の設計機能に従ってご使用いただき、指定された使用範囲を超えて使用しないでください。
- この製品は、身体的または精神的に障害のある人、または関連する経験や知識のない人による使用は禁止されています。
- ただし、安全責任者の指導および監督のもとで使用する場合は除きます。
- この製品は小児の危険を及ぼします。お子様はこの製品を触らないでください。
- アイロンが冷めていないときは、お子様の手の届くところに置かないでください。
- お子様の近くでご使用になる場合は、お子様に十分ご注意ください。
- 酔やその他の汚れクリーナーを水タンクに入れないでください。
- 化学添加物、香料、スチール除去剤は使用できません。
- 使用後、作業を一時停止する場合は、アイロンを台の上に置いてから電源を差し込んでください。
- 面がけた状態。
- プラグを抜き差しする前に、スイッチをオフ位置に設定してください。
- 電源を切る場合は、プラグを持って電源を抜いてください。
- アイロンを水やその他の液体に浸さないでください。
- 濡れた手での使用は禁止です。
- この製品を雨や日光にさらさないでください。
- 火傷を防ぐため、使用中はヒーターパネルに触れないでください。
- 火傷を防ぐため、使用中はヒーターパネルに触れないでください。
- 電気アイロンは非常に高温になっており、火傷を避けるため、人体に直接当てて使用しないでください。

予防:

- ユーザーは、電源に接続されている間はアイロンから離れることはできません。
- 水タンクに水を入れる前に、アイロンのプラグをコンセントから抜いてください。
- アイロンは安定した表面に置いて使用する必要があります。
- アイロンをスタンドに置くときは、スタンドが安定した場所にあることを確認してください。
- アイロンが落ちた場合、目に見える損傷の兆候がある場合、または漏れがある場合は、電気アイロンは使用できません。
- 電気アイロンの電源コードが傷んだり、故障したりした場合は、危険を避けるため、交換は、製造元、そのサービス部門、または同様の部門の資格のある担当者が行う必要があります。

衣類の繊維とアイロンがけの方法:

- 熱に弱い生地の場合は、変形や損傷を避けるために、衣服の上に布を置く必要があります。
- 混紡衣類にアイロンをかける場合は、耐熱性の低い繊維に基づいて温度を選択してください。
- 異素材の衣類にアイロンをかける場合は、耐熱性の低い衣類から先にアイロンをかけてください。

メンテナンス:

- アイロンの底面やその他の部分は柔らかい布で拭いてください。
- 汚れがひどい場合は、直接水で拭かず、柔らかい布で拭いてください。
- 中性洗剤で拭きます。
- ベースプレートに付着した堆積物や頑固な物質は湿らせた布で除去できるかどうか。研磨性の液体洗剤で掃除してください。
- パネルを拭くのに鉄線や金属製の衛生器具を使用しない場合は、柔らかい布で拭いてください。掃除後は布で拭いてください。
- 電源スイッチを切り、アイロンが完全に冷めるまでお待ちください。
- アイロンが逆さまになっています。

警告:

- 火傷を避けるため、製品を使用するときは加熱プレート部分に触れないでください。
- 製品の使用後は電源を切り、可燃性および爆発性物質から遠ざける必要があります。



Electric Iron Instruction Manual



Dear Customers:
Thanks for purchasing our products, please kindly read this manual carefully before use for the correct means.

Product name: Electric Iron		Product model	Rated power	Rated voltage	Rated frequency
		K1, K2	40W	220~	50Hz
Execution standards		K3, K5	35W	220~	50Hz
GB 4706.2-2007	GB 4706.1-2005	K6, K7	30W	220~	50Hz
GB 17625.1-2022	GB 4343.1-2018	K8, K9	25W	220~	50Hz

Methods of Use:

- Use a measuring cup to add water before use.
- Connect to the power supply and wait for 15 seconds to heat up before use.
- Spray a suitable amount of water on the area that needs to be ironed for flattening.
- After use, unplug the power.
- Clean out the remaining water inside the fuselage.
- Store it after the heating panel has cooled down.

Instructions for use:

- Before use, please check if the required voltage matches the voltage in your home. If the product has a grounding plug, it must be plugged into a grounded outlet.
- Please use this product according to designed functions and do not use it outside of the specified usage range.
- The product is prohibited for use by individuals with physical or mental disabilities or those lacking relevant operational experience, unless under the guidance and supervision of a responsible person for their safety.
- This product is prohibited for use by children. Please do not let children play with this product.
- Do not place the electric iron in an area accessible to children when the electric iron temperature has not cooled down. Please be careful and take good care of children when using.
- Do not pour vinegar or other cleaning agents into the water storage tank.
- Do not use chemical additives, fragrances, or descaling agents.
- When temporarily stopping the operation after use, place the electric iron on the base and then unplug the power plug.
- Please turn off the switch before inserting or removing the plug. Do not pull the power cord forcefully in use. When cutting off the power, please hold the plug and pull it out.
- Do not immerse the electric iron in water or any other liquid.
- Do not use this product with wet hands.
- Do not expose this product to rain or direct sunlight.
- Please do not touch the hot plate when using to prevent burns.
- For the high temperature of the electric iron, please do not use the machine directly on the human body to avoid burns.

Notes:

- Do not leave during the power-on period.
- Before adding water to the water tank, the power plug of the electric iron must be unplugged from the socket.
- The electric iron must be used and placed on a stable surface.
- When the electric iron is placed on the bracket, make sure that the surface of the bracket is stable and reliable.
- Do not use the product if it has been dropped or if visible damage or leakage has occurred.
- If the power cord is damaged, please stop using it immediately to avoid danger. replacement must be carried out by professionals from the manufacturer's maintenance department or similar department.

Clothing Fibers and Ironing Methods:

- For heat-sensitive fabrics, a cloth should be placed on top of the garment when ironing to prevent deformation or damage.
- When ironing blended fabrics, the temperature should be selected based on the fiber with lower heat resistance.
- When ironing different fabrics, start by ironing the ones with lower heat resistance.

Maintenance Method:

- Use a soft cloth to wipe the bottom and other parts of the electric iron.
- When the product has severe stains, do not wash it directly with water, but use a soft cloth dampened with a neutral detergent to wipe it.
- Any sediment or starch substance adhered to the bottom plate can be cleaned with a damp cloth or a liquid cleaner that does not contain abrasive properties.
- Avoid using wire or metal cleaning tools to wipe the bottom plate. Clean up plastic parts with a damp cloth and then wipe dry with a cloth.
- Turn off the power switch and wait for the electric iron to cool down completely before turning it upside down.

Warnings:

- Please do not touch the heated plate area while using the product to avoid burns.
- Please turn off the power and keep away from flammable and explosive materials after use.



ferro da stiro
Guida dell'utente



utente rispettato:
Grazie sinceramente per aver acquistato il nostro prodotto Per consentirvi di utilizzare questo prodotto correttamente,
Si prega di leggere attentamente questo manuale prima dell'uso.

Table with 4 columns: Nome del prodotto, modello, energia, Voltaggio, frequenza. Rows include K1, K2, 40W, 220V~, 50Hz and execution standards GB 4706.2-2007, GB 4706.1-2005, GB 17625.1-2022, GB 4343.1-2018.

- Istruzioni:
1. Si prega di utilizzare il misurino per aggiungere acqua prima dell'uso.
2. Collegare l'alimentatore e riscaldarlo per 15 secondi prima dell'uso.
3. Spruzzare una quantità adeguata di acqua sulla zona da stirare, quindi stirarla in piano.
4. Dopo l'uso è sufficiente scollegare l'alimentatore.
5. Pulire l'acqua rimanente nella fusoliera.
6. Il pannello riscaldante può essere riposto dopo che si è raffreddato.

- Termini e Condizioni:
1. Prima dell'uso, verificare se la tensione richiesta da questo prodotto corrisponde alla tensione della propria casa. Se prodotto
2. Se il prodotto è dotato di spina con messa a terra, deve essere collegato a una presa con messa a terra.
3. Il serbatoio di acqua è dotato di protezione del prodotto e non utilizzare questo prodotto al di fuori dell'intervallo di utilizzo specificato.
4. L'uso di questo prodotto è vietato ai bambini. Non lasciare che i bambini giochino con questo prodotto.
5. Quando il ferro non si è raffreddato, non metterlo alla portata dei bambini.
6. Quando si utilizza vicino ai bambini, prendersi cura di
7. Non versare mai aceto o altri detersivi per lo sporco nel serbatoio dell'acqua.
8. Non sono ammessi additivi chimici, fragranze o decalcificanti.
9. Quando si interrompe temporaneamente il lavoro dopo l'uso, posizionare il ferro sulla base e quindi collegare la fonte di alimentazione.
10. Testa tirata fuori.
11. Prima di inserire o scollegare la spina, impostare l'interruttore in posizione OFF.
12. Per interrompere l'alimentazione, allentare la spina ed estrarre l'alimentatore.
13. Non immergere il ferro in acqua o altri liquidi.
14. È vietato utilizzare questo prodotto con le mani bagnate.
15. Non esporre questo prodotto alla pioggia o alla luce del sole.
16. Non toccare il pannello riscaldante durante l'uso per evitare ustioni.
17. La temperatura del ferro da stiro è molto alta. Per evitare ustioni, non utilizzare la macchina direttamente contro il corpo umano.

- Precauzioni:
1. All'utente non è consentito allontanarsi dal ferro mentre è collegato alla rete elettrica.
2. Prima di riempire il serbatoio dell'acqua, il ferro deve essere scollegato dalla presa.
3. Il ferro deve essere utilizzato e appoggiato su una superficie stabile.
4. Quando posizionate il ferro sul supporto, assicuratevi che il supporto sia su una superficie stabile.
5. Se il ferro è caduto, presenta segni visibili di danni o perde, questo è il caso
6. Non è possibile utilizzare un ferro da stiro.
7. Se il cavo di alimentazione del ferro da stiro è danneggiato o comunque non funziona correttamente, per evitare pericoli,
8. La sostituzione deve essere eseguita da personale qualificato del produttore, del suo servizio di assistenza o di un reparto simile.

- Fibre dell'abbigliamento e metodi di stiratura:
1. Per i tessuti sensibili al calore, è necessario posizionare un pannello sopra gli indumenti per evitare deformazioni o danni.
2. Quando si stirano capi misti, scegliere una temperatura basata sulle fibre meno resistenti al calore.
3. Quando si stirano capi di tessuti diversi, stirare prima i capi con scarsa resistenza al calore.

- Manutenzione:
1. Pulisci il fondo e le altre parti del ferro con un pannello morbido.
2. Quando il prodotto presenta macchie gravi, non pulirlo direttamente con acqua. Utilizzare un pannello morbido per pulirlo.
3. Pulisci con detergente neutro.
4. Per eventuali depositi attaccati alla piastra di base,
5. Le sostanze sbrinate possono essere rimosse con un pannello umido oppure no
6. Pulire con detersivo liquido abrasivo.
7. Dopo la pulizia, pulirlo con un pannello.
8. Evitare l'uso di filo di ferro o sanitari
9. Non pulire per pulisci il pannello essere puliti con un pannello umido
10. Dopo la pulizia, pulirlo con un pannello.

- Il ferro è capovolto.
Avvertenza:
1. Non toccare l'area della piastra riscaldante durante l'utilizzo del prodotto per evitare ustioni.
2. Il prodotto deve essere spento dopo l'uso e tenuto lontano da materiali infiammabili ed esplosivi.



Electric Iron
Instruction Manual



Dear Customers:
Thanks for purchasing our products, please kindly read this manual carefully before use for the correct means.

Table with 5 columns: Product name, Product model, Rated power, Rated voltage, Rated frequency. Rows include K1, K2, 40W, 220~, 50Hz and execution standards GB 4706.2-2007, GB 4706.1-2005, GB 17625.1-2022, GB 4343.1-2018.

- Methods of Use:
1. Use a measuring cup to add water before use.
2. Connect to the power supply and wait for 15 seconds to heat up before use.
3. Spray a suitable amount of water on the area that needs to be ironed for flattening.
4. After use, unplug the power.
5. Clean out the remaining water inside the fuselage.
6. Store it after the heating panel has cooled down.

- Instructions for use:
1. Before use, please check if the required voltage matches the voltage in your home. If the product has a grounding plug, it must be plugged into a grounded outlet.
2. Please use this product according to designed functions and do not use it outside of the specified usage range.
3. The product is prohibited for use by individuals with physical or mental disabilities or those lacking relevant operational experience, unless under the guidance and supervision of a responsible person for their safety.
4. This product is prohibited for use by children. Please do not let children play with this product.
5. Do not place the electric iron in an area accessible to children when the electric iron temperature has not cooled down. Please be careful and take good care of children when using.
6. Do not pour vinegar or other cleaning agents into the water storage tank.
7. Do not use chemical additives, fragrances, or descaling agents.
8. When temporarily stopping the operation after use, place the electric iron on the base and then unplug the power plug.
9. Please turn off the switch before inserting or removing the plug. Do not pull the power cord forcefully in use. When cutting off the power, please hold the plug and pull it out.
10. Do not immerse the electric iron in water or any other liquid.
11. Do not use this product with wet hands.
12. Do not expose this product to rain or direct sunlight.
13. Please do not touch the hot plate when using to prevent burns.
14. For the high temperature of the electric iron, please do not use the machine directly on the human body to avoid burns.

- Notes:
1. Do not leave during the power-on period.
2. Before adding water to the water tank, the power plug of the electric iron must be unplugged from the socket.
3. The electric iron must be used and placed on a stable surface.
4. When the electric iron is placed on the bracket, make sure that the surface of the bracket is stable and reliable.
5. Do not use the product if it has been dropped or if visible damage or leakage has occurred.
6. If the power cord is damaged, please stop using it immediately to avoid danger. replacement must be carried out by professionals from the manufacturer's maintenance department or similar department.

- Clothing Fibers and Ironing Methods:
1. For heat-sensitive fabrics, a cloth should be placed on top of the garment when ironing to prevent deformation or damage.
2. When ironing blended fabrics, the temperature should be selected based on the fiber with lower heat resistance.
3. When ironing different fabrics, start by ironing the ones with lower heat resistance.

- Maintenance Method:
1. Use a soft cloth to wipe the bottom and other parts of the electric iron.
2. When the product has severe stains, do not wash it directly with water, but use a soft cloth dampened with a neutral detergent to wipe it.
3. Any sediment or starch substance adhered to the bottom plate can be cleaned with a damp cloth or a liquid cleaner that does not contain abrasive properties.
4. Avoid using wire or metal cleaning tools to wipe the bottom plate. Clean up plastic parts with a damp cloth and then wipe dry with a cloth.
5. Turn off the power switch and wait for the electric iron to cool down completely before turning it upside down.

- Warnings:
1. Please do not touch the heated plate area while using the product to avoid burns.
2. Please turn off the power and keep away from flammable and explosive materials after use.



전기 다리미 사용자 가이드



존경하는 사용자:
고객님께서 본 제품을 올바르게 사용할 수 있도록 당사 제품을 구입해 주셔서 진심으로
고맙습니다. 사용하기 전에 본 설명서를 주의 깊게 읽으십시오.

제품명: 전기 다리미	모델	합	전압	빈도
원 기준:	K1, K2	40W	220~	50Hz
GB4706.2-2007 GB4706.1-2005	K3, K5	35W	220~	50Hz
GB17625.1-2022 GB4343.1-2018	K6, K7	30W	220~	50Hz
	K8, K9	25W	220~	50Hz

지침:

1. 사용하기 전에 계량 컵을 사용하여 물을 추가하십시오.
2. 전원을 연결하고 15초간 가열한 후 사용하세요.
3. 다리미가 필요한 부위에 적당량의 물을 분사한 후 평평하게 다림질해
4. 작동 후에는 전원 공급 장치를 뽑기만 하면 됩니다.
5. 기체에 남아있는 물을 청소하십시오.
6. 가열 패널은 식힌 후 보관할 수 있습니다.

이용 약관:

1. 사용하기 전에 본 제품에 필요한 전압이 귀하의 가정의 전압과 일치하는지 확인하십시오. 전압이 일치하지 않으면 전압 변환기를 사용하십시오.
2. 제품에 전기 플러그가 있는 경우 접지된 콘센트에 연결해야 합니다.
3. 제품 설계상의 기능에 따라 사용하십시오. 규정된 사용 범위 외에서는 본 제품을 사용하지
4. 본 제품을 신체의 장식적 장치가 있거나 관련 작동 경험이 부족한 사람이 사용하는 것을 금지합니다.
5. 안전을 책임지는 사람의 지도 및 감독 하에 사용하지 않는 한.
6. 본 제품을 어린이의 손이 닿지 않는 곳에 두십시오. 어린이의 손이 닿지 않는 곳에 두십시오.
7. 다리미가 식지 않은 경우에는 어린이의 손이 닿는 곳에 두지 마십시오.
8. 어린이 근처에서 사용할 경우에는 어린이의 주의를 기울여
9. 플러그를 뽑아내거나 분리하기 전에 스위치를 꺼십시오. 플러그를 뽑아내거나 분리할 때는 플러그를 잡고 전원을
10. 플러그를 뽑아내거나 분리할 때는 플러그를 잡고 전원을
11. 젖은 손으로 본 제품을 사용하는 것은 금지되어 있습니다.
12. 본 제품을 비나 햇빛에 노출시키지 마십시오.
13. 화상을 입을 수 있으므로 사용 중에는 가열 패널을 만지지 마십시오.
14. 전기 다리미의 온도는 매우 높으므로 화상을 입을 수 있으니 인체에 직접 대고 사용하지 마세요.

지침:

1. 사용자는 다리미가 전원에 연결되어 있는 동안 다리미를 떠나서는 안 됩니다.
2. 물탱크를 채우기 전에 다리미를 콘센트에서 뽑아야
3. 합리타는 안정된 표면에 놓고 사용해야 합니다.
4. 다리미를 스탠드에 놓을 때 스탠드가 안정된 표면에 있는지 확인하십시오.
5. 다리미를 떨어뜨렸거나, 눈에 띄는 손상 흔적이 있거나, 물이 새는 경우, 전기 다리미는 사용할 수 없습니다.
6. 전기 다리미의 전원 코드가 손상되거나 기타 오작동하는 경우 위험을 방지하기 위해 교체는 제조업체, 해당 서비스 부서 또는 유사한 부서의 자격을 갖춘 직원이 수행해야 합니다.

의류 섬유 및 다림질 방법:

1. 열에 민감한 직물의 경우 변형이나 손상을 방지하기 위해 옷 위에 천을 깔아야 합니다.
2. 온방 의류를 다림질할 때는 내열성이 낮은 섬유를 기준으로 온도를 선택하세요.
3. 다른 재질의 옷을 다림질할 때에는 내열성이 약한 옷부터 다림질하세요

유지:

1. 부드러운 천으로 다리미 바닥과 기타 부분을 닦아주세요.
2. 제품에 심한 얼룩이 있을 경우에는 물로 직접 닦지 마세요.
3. 중성세제로 닦아주세요.
4. 베이스 플레이트에 부착된 침전물(칼슘)은 젖은 천으로 제거할 수 있습니다.
5. 연마성 액체 세제로 청소하십시오.
6. 패널을 닦을 때 철선이나 금속 위생용 용액(차광제)과 세화품은 젖은 천으로 청소할 수 있습니다.
7. 청소 후에는 천으로 깨끗이
8. 다리미가 식을 때까지
9. 다리미가 식을 때까지

경고:

1. 화상을 입을 수 있으므로 제품 사용 시 열만 부분을 만지지 마십시오.
2. 제품 사용 후 전원을 꺼야 하며, 인화성, 폭발성 물질로부터 멀리 보관해야 합니다.

지침증

중대안전

중대안전

Electric Iron Instruction Manual



Dear Customers:
Thanks for purchasing our products, please kindly read this manual carefully
before use for the correct means.

Product name: Electric Iron	Product model	Rated power	Rated voltage	Rated frequency
	K1, K2	40W	220~	50Hz
Execution standards	K3, K5	35W	220~	50Hz
GB4706.2-2007 GB4706.1-2005	K6, K7	30W	220~	50Hz
GB17625.1-2022 GB4343.1-2018	K8, K9	25W	220~	50Hz

Methods of Use:

1. Use a measuring cup to add water before use.
2. Connect to the power supply and wait for 15 seconds to heat up before use.
3. Spray a suitable amount of water on the area that needs to be ironed for flattening.
4. After use, unplug the power.
5. Clean out the remaining water inside the fuselage.
6. Store it after the heating panel has cooled down.

Instructions for use:

1. Before use, please check if the required voltage matches the voltage in your home. If the product has a grounding plug, it must be plugged into a grounded outlet.
2. Please use this product according to designed functions and do not use it outside of the specified usage range.
3. The product is prohibited for use by individuals with physical or mental disabilities or those lacking relevant operational experience, unless under the guidance and supervision of a responsible person for their safety.
4. This product is prohibited for use by children. Please do not let children play with this product.
5. Do not place the electric iron in an area accessible to children when the electric iron temperature has not cooled down. Please be careful and take good care of children when using.
6. Do not pour vinegar or other cleaning agents into the water storage tank.
7. Do not use chemical additives, fragrances, or descaling agents.
8. When temporarily stopping the operation after use, place the electric iron on the base and then unplug the power plug.
9. Please turn off the switch before inserting or removing the plug. Do not pull the power cord forcefully in use. When cutting off the power, please hold the plug and pull it out.
10. Do not immerse the electric iron in water or any other liquid.
11. Do not use this product with wet hands.
12. Do not expose this product to rain or direct sunlight.
13. Please do not touch the hot plate when using to prevent burns.
14. For the high temperature of the electric iron, please do not use the machine directly on the human body to avoid burns.

Notes:

1. Do not leave during the power-on period.
2. Before adding water to the water tank, the power plug of the electric iron must be unplugged from the socket.
3. The electric iron must be used and placed on a stable surface.
4. When the electric iron is placed on the bracket, make sure that the surface of the bracket is stable and reliable.
5. Do not use the product if it has been dropped or if visible damage or leakage has occurred.
6. If the power cord is damaged, please stop using it immediately to avoid danger. replacement must be carried out by professionals from the manufacturer's maintenance department or similar department.

Clothing Fibers and Ironing Methods:

1. For heat-sensitive fabrics, a cloth should be placed on top of the garment when ironing to prevent deformation or damage.
2. When ironing blended fabrics, the temperature should be selected based on the fiber with lower heat resistance.
3. When ironing different fabrics, start by ironing the ones with lower heat resistance.

Maintenance Method:

1. Use a soft cloth to wipe the bottom and other parts of the electric iron.
2. When the product has severe stains, do not wash it directly with water, but use a soft cloth dampened with a neutral detergent to wipe it.
3. Any sediment or starch substance adhered to the bottom plate can be cleaned with a damp cloth or a liquid cleaner that does not contain abrasive properties.
4. Avoid using wire or metal cleaning tools to wipe the bottom plate. Clean up plastic parts with a damp cloth and then wipe dry with a cloth.
5. Turn off the power switch and wait for the electric iron to cool down completely before turning it upside down.

Warnings:

1. Please do not touch the heated plate area while using the product to avoid burns.
2. Please turn off the power and keep away from flammable and explosive materials after use.

지침증

중대안전

중대안전

elektriskt strykjärn
användarmanual



respekterad användare:
Vi tackar dig hjärtligt för att du har köpt vår produkt. För att du ska kunna använda den på rätt sätt
Läs denna bruksanvisning noggrant före användning.

Produktnamn: Elektriskt strykjärn	modell	kraft	Spänning	frekvens
	K1, K2	40W	220~	50Hz
Implementeringsstandarder:	K3, K5	35W	220~	50Hz
GB 4706.2-2007 GB 4706.1-2005	K6, K7	30W	220~	50Hz
GB 17625.1-2022 GB 4343.1-2018	K8, K9	25W	220~	50Hz

- Instruktioner:
1. Tillsätt vatten i mätglaset upp till den doseringslinje som motsvarar önskad mängd innan.
 2. Anslut till strömförsörjningen, värm upp i 15 sekunder och använd sedan.
 3. Spruta en lämplig mängd vatten på de områden som behöver strykas och stryk sedan slätt.
 4. När du är klar, koppla bara ur den.
 5. Rengör vattnet som finns kvar i kroppen.
 6. Värmepanelen kan förvaras efter att den har svalnat.

- Villkor:
1. Kontrollera att produktens spänning överensstämmer med spänningen i ditt hem innan du använder den. Om produktens spänning inte överensstämmer med spänningen i ditt hem, kan detta leda till skador på produkten eller brand.
 2. Om produkten har en jordad kontakt måste den anslutas till ett jordat uttag.
 3. Använd inte produkten om den är skadad eller om den uppstår något annat fel på apparaten, ska den lämnas till ett auktoriserat servicecenter för reparation för att undvika risker.
 4. Produkten är inte avsedd för användning av barn. Läs inte barn leka med denna produkt.
 5. Lämna inte ett varmt strykjärn utan uppsikt på en plats där barn kan nå det.
 6. Håll aldrig åttika eller andra smutsrengöringsmedel i vattentanken.
 7. Inga kemiska tillsatser, dofter eller avkalkningsmedel är tillåtna.
 8. Även när du tar en paus från strykningen ska du placera strykjärnet på basenheten och dra ut kontakten ur vägguttaget.
 9. Stäng av strömmen innan du sätter i eller drar ut kontakten vid användning.
 10. När du kopplar ur sladden, dra i.
 11. Använd inte strykjärnet i vatten eller andra vätskor.
 12. Utsätt inte denna produkt för regn eller solljus.
 13. Rör inte vid värmeplattan under användning, risk för brännskador.
 14. Strykjärnet blir mycket varmt. För att undvika brännskador, rikta det inte direkt mot kroppen.

- Försiktighetsåtgärder:
1. Användaren får inte lämna strykjärnet utan uppsikt när det är anslutet till eluttaget.
 2. Innan du fyller vattenbehållaren, se till att dra ut strykjärnets stickkontakt ur vägguttaget.
 3. Strykjärnet måste användas och förvaras på en stabil yta.
 4. När strykjärnet placeras på sitt stöd, se till att stödet är placerat på en stabil yta.
 5. Om ett strykjärn har tappats, visar synliga tecken på skador eller läcker.
 6. Ett strykjärn kan inte användas.
 7. Om sladden till ett strykjärn är skadad eller om det uppstår något annat fel på apparaten, ska den lämnas till ett auktoriserat servicecenter för reparation för att undvika risker.
 8. Måste bytas ut av tillverkaren, dennes servicerepresentant eller liknande kvalificerad personal.

- Textilfibrer och strykinstruktioner:
1. För värmekänsliga tyger, använd en pressduk vid strykning för att undvika deformation eller skador.
 2. När du stryker blandade tyger, välj temperaturinställningen för den fiber som tål minst värme.
 3. När du stryker kläder av olika material, börja med de plagg som tål lägre värme.

- Underhåll:
1. Torka av strykjärnets undersida och andra delar med en mjuk trasa.
 2. När produkten är kraftigt nedsmutsad, tvätta den inte direkt med vatten. Använd istället en mjuk trasa eller en rengöringsmedel.
 3. För eventuella avlagringar som fästmått eller fett kan rengöras med en fuktig trasa eller... Rengöring med flytande rengöringsmedel med slipfäkt.
 4. Använd inte stålull eller rengöringsmedel som slipfäkt eller andra skarpa föremål på värmeplattan.
 5. Torka rent med en trasa efter rengöring.
 6. Stäng av strömbrytaren och låt strykjärnet svalna helt innan.
 7. Strykjärnet är upp och ner.

- Varning:
1. Rör inte vid värmeplattan när produkten används, detta för att undvika brännskador.
 2. Produkten måste stängas av efter användning och förvaras åtskild från brandfarliga och explosiva material.



Electric Iron
Instruction Manual



Dear Customers:
Thanks for purchasing our products, please kindly read this manual carefully
before use for the correct means.

Product name: Electric Iron	Product model	Rated power	Rated voltage	Rated frequency
	K1, K2	40W	220~	50Hz
Execution standards	K3, K5	35W	220~	50Hz
GB 4706.2-2007 GB 4706.1-2005	K6, K7	30W	220~	50Hz
GB 17625.1-2022 GB 4343.1-2018	K8, K9	25W	220~	50Hz

- Methods of Use:
1. Use a measuring cup to add water before use.
 2. Connect to the power supply and wait for 15 seconds to heat up before use.
 3. Spray a suitable amount of water on the area that needs to be ironed for flattening.
 4. After use, unplug the power.
 5. Clean out the remaining water inside the fuselage.
 6. Store it after the heating panel has cooled down.
- Instructions for use:
1. Before use, please check if the required voltage matches the voltage in your home. If the product has a grounding plug, it must be plugged into a grounded outlet.
 2. Please use this product according to designed functions and do not use it outside of the specified usage range.
 3. The product is prohibited for use by individuals with physical or mental disabilities or those lacking relevant operational experience, unless under the guidance and supervision of a responsible person for their safety.
 4. This product is prohibited for use by children. Please do not let children play with this product.
 5. Do not place the electric iron in an area accessible to children when the electric iron temperature has not cooled down. Please be careful and take good care of children when using.
 6. Do not pour vinegar or other cleaning agents into the water storage tank.
 7. Do not use chemical additives, fragrances, or descaling agents.
 8. When temporarily stopping the operation after use, place the electric iron on the base and then unplug the power plug.
 9. Please turn off the switch before inserting or removing the plug. Do not pull the power cord forcefully in use. When cutting off the power, please hold the plug and pull it out.
 10. Do not immerse the electric iron in water or any other liquid.
 11. Do not use this product with wet hands.
 12. Do not expose this product to rain or direct sunlight.
 13. Please do not touch the hot plate when using to prevent burns.
 14. For the high temperature of the electric iron, please do not use the machine directly on the human body to avoid burns.

- Notes:
1. Do not leave during the power-on period.
 2. Before adding water to the water tank, the power plug of the electric iron must be unplugged from the socket.
 3. The electric iron must be used and placed on a stable surface.
 4. When the electric iron is placed on the bracket, make sure that the surface of the bracket is stable and reliable.
 5. Do not use the product if it has been dropped or if visible damage or leakage has occurred.
 6. If the power cord is damaged, please stop using it immediately to avoid danger. replacement must be carried out by professionals from the manufacturer's maintenance department or similar department.

- Clothing Fibers and Ironing Methods:
1. For heat-sensitive fabrics, a cloth should be placed on top of the garment when ironing to prevent deformation or damage.
 2. When ironing blended fabrics, the temperature should be selected based on the fiber with lower heat resistance.
 3. When ironing different fabrics, start by ironing the ones with lower heat resistance.

- Maintenance Method:
1. Use a soft cloth to wipe the bottom and other parts of the electric iron.
 2. When the product has severe stains, do not wash it directly with water, but use a soft cloth dampened with a neutral detergent to wipe it.
 3. Any sediment or starch substance adhered to the bottom plate can be cleaned with a damp cloth or a liquid cleaner that does not contain abrasive properties.
 4. Avoid using wire or metal cleaning tools to wipe the bottom plate. Clean up plastic parts with a damp cloth and then wipe dry with a cloth.
 5. Turn off the power switch and wait for the electric iron to cool down completely before turning it upside down.

- Warnings:
1. Please do not touch the heated plate area while using the product to avoid burns.
 2. Please turn off the power and keep away from flammable and explosive materials after use.



elektrické železo
uživatelská příručka



respektovaný uživatel:
Upřímně děkujeme za nákup produktu naší společností. Abychom vám pomohli s jeho správným používáním,
Před použitím si prosím pečlivě přečtěte tento návod.

Název produktu:	Elektrická žehlička	Modely	Napájení	Napětí	frekvence
		K1, K2	40W	220~	50Hz
Implementační standardy:		K3, K5	35W	220~	50Hz
GB 4706.2-2007	GB 4706.1-2005	K6, K7	30W	220~	50Hz
GB 17625.1-2022	GB 4343.1-2018	K8, K9	25W	220~	50Hz

- Instrukce:**
- Před použitím prosím přidejte vodu pomocí odměrky.
 - Připojte k napájení a po 15 sekundách zahrávání je připraveno k použití.
 - Na místa, která potřebují žehlení, nejprve nastříkejte malé množství vody a poté žehlete do hladka.
 - Po dokončení použití stačt odpojit napájení.
 - Voda, která zbyla v těle, byla vyčistěna.
 - Teplý panel by se měl nechat vychladnout, než se složí.
- Pravidla a podmínky:**
- Před použitím zkontrolujte, zda napětí potřebné pro tento produkt odpovídá napětí ve vašem domě. Pokud je napětí jiné, než je uvedeno v tomto návodu, nepoužívejte produkt.
 - Pokud má produkt zemní zástrčku, musí být zapojen do uzemněné zásuvky. Používejte produkt v souladu s jeho designem a funkcemi. Nepoužívejte produkt mimo určený rozsah použití.
 - Používejte produkt pouze pod vedením a dohledem osoby odpovědné za jeho bezpečnost.
 - Produkt je zakázán pro děti, nenechávejte děti hrát si s tímto produktem.
 - Žehličku nenechávejte na místě, kde by se k ní mohly dostat děti, dokud není zcela vychladlá.
 - Pokud jsou v blízkosti dětí, věnujte jim prosím zvláštní pozornost a dohled.
 - Do nádržky na vodu nikdy nelejte ocet nebo jiné čisticí směsi.
 - Nejsou povoleny žádné chemické přísady, vůně nebo odvěpňovací.
 - Když se po použití na chvíli zastavíte, nechte žehličku stát na podstavci a poté odpojte napájecí kabel.
 - Před zasunutím nebo vytáhnutím zástrčky vypněte spínač.
 - Nesmíte ponořit žehličku do vody ani do jiných kapalin.
 - Nepoužívejte tento produkt s mokryma rukama.
 - Nevystavujte tento výrobek dešti ani slunečnímu záření.
 - Při používání se nedotýkejte horké desky, abyste se vyhnuli popálením.
 - Teplota žehličky je velmi vysoká, aby nedošlo k popálením, nepoužívejte ji přímo na tělo.

- Opatrění:**
- Během zapnutého žehličky nesmí uživatel odejít.
 - Před naplněním vodní nádrže je nutné odpojit elektrickou žehličku ze zásuvky.
 - Žehlička se musí používat a odkládat na stabilním povrchu.
 - Když je žehlička umístěna na svém stojánku, ujistěte se, že stojánek je umístěn na stabilním povrchu.
 - Pokud žehlička spadne, jeví známky viditelného poškození nebo z ní něco uniká, pak žehlička se nedá používat.
 - Pokud je napájecí kabel žehličky poškozený nebo je na něm jiná závada, aby se zabránilo nebezpečí, výměnu musí provést kvalifikovaný personál výrobce, jeho servisního oddělení nebo podobného oddělení.

- Vlákna oděvu a způsob žehlení:**
- Pro tepleně citlivé látky by se mělo žehlit přes látku, aby se zabránilo deformaci nebo poškození.
 - Průžehlení směsových tkanin byste měli zvolit teplotu podle vlákna s níž žehlete, aby se zabránilo deformaci nebo poškození.
 - Průžehlení oděvů z různých materiálů žehlete nejprve oděvy s nižší teplotou odolností.

- Údržba:**
- Otřete spodní část žehličky a další části měkkým hadříkem.
 - Pokud se na produktu objeví silné skvrny, nečistěte ho přímo vodou. Použijte měkký hadřík namočený v teplé vodě.
 - Pro jakýkoli sediment, který se na spodní desce objeví, použijte jemný hadřík namočený v teplé vodě.
 - Vyhnete se používání drátěných nebo tvrdých těles, aby nedošlo k poškození povrchu.
 - Po vyčistění otřete hadříkem do sucha.
 - Vypněte vypínač a nechte žehličku zcela vychladnout, poté žehlička je obrácená.
- Upozornění:**
- Při používání produktu se nedotýkejte oblasti topné desky, abyste se nepopálili.
 - Po použití produktu vypněte napájení a uchovávejte jej mimo dosah hořlavých a výbušných materiálů.



Electric Iron
Instruction Manual



Dear Customers:
Thanks for purchasing our products, please kindly read this manual carefully before use for the correct means.

Product name:	Electric Iron	Product model	Rated power	Rated voltage	Rated frequency
		K1, K2	40W	220~	50Hz
Execution standards		K3, K5	35W	220~	50Hz
GB 4706.2-2007	GB 4706.1-2005	K6, K7	30W	220~	50Hz
GB 17625.1-2022	GB 4343.1-2018	K8, K9	25W	220~	50Hz

- Methods of Use:**
- Use a measuring cup to add water before use.
 - Connect to the power supply and wait for 15 seconds to heat up before use.
 - Spray a suitable amount of water on the area that needs to be ironed for flattening.
 - After use, unplug the power.
 - Clean out the remaining water inside the fuselage.
 - Store it after the heating panel has cooled down.
- Instructions for use:**
- Before use, please check if the required voltage matches the voltage in your home. If the product has a grounding plug, it must be plugged into a grounded outlet.
 - Please use this product according to designed functions and do not use it outside of the specified usage range.
 - The product is prohibited for use by individuals with physical or mental disabilities or those lacking relevant operational experience, unless under the guidance and supervision of a responsible person for their safety.
 - This product is prohibited for use by children. Please do not let children play with this product.
 - Do not place the electric iron in an area accessible to children when the electric iron temperature has not cooled down. Please be careful and take good care of children when using.
 - Do not pour vinegar or other cleaning agents into the water storage tank.
 - Do not use chemical additives, fragrances, or descaling agents.
 - When temporarily stopping the operation after use, place the electric iron on the base and then unplug the power plug. Do not pull the power cord forcefully in use. When cutting off the power, please hold the plug and pull it out.
 - Do not immerse the electric iron in water or any other liquid.
 - Do not use this product with wet hands.
 - Do not expose this product to rain or direct sunlight.
 - Please do not touch the hot plate when using to prevent burns.
 - For the high temperature of the electric iron, please do not use the machine directly on the human body to avoid burns.

- Notes:**
- Do not leave during the power-on period.
 - Before adding water to the water tank, the power plug of the electric iron must be unplugged from the socket.
 - The electric iron must be used and placed on a stable surface.
 - When the electric iron is placed on the bracket, make sure that the surface of the bracket is stable and reliable.
 - Do not use the product if it has been dropped or if visible damage or leakage has occurred.
 - If the power cord is damaged, please stop using it immediately to avoid danger. replacement must be carried out by professionals from the manufacturer's maintenance department or similar department.

- Clothing Fibers and Ironing Methods:**
- For heat-sensitive fabrics, a cloth should be placed on top of the garment when ironing to prevent deformation or damage.
 - When ironing blended fabrics, the temperature should be selected based on the fiber with lower heat resistance.
 - When ironing different fabrics, start by ironing the ones with lower heat resistance.

- Maintenance Method:**
- Use a soft cloth to wipe the bottom and other parts of the electric iron.
 - When the product has severe stains, do not wash it directly with water, but use a soft cloth dampened with a neutral detergent to wipe it.
 - Any sediment or starch substance adhered to the bottom plate can be cleaned with a damp cloth or a liquid cleaner that does not contain abrasive properties.
 - Avoid using wire or metal cleaning tools to wipe the bottom plate. Clean up plastic parts with a damp cloth and then wipe dry with a cloth.
 - Turn off the power switch and wait for the electric iron to cool down completely before turning it upside down.

- Warnings:**
- Please do not touch the heated plate area while using the product to avoid burns.
 - Please turn off the power and keep away from flammable and explosive materials after use.



دلیل المستخدم



مستخدم محترم:

نشكركم بشدة على شراء منتجنا لتمكينك من استخدام هذا المنتج بشكل صحيح.
يرجى قراءة هذا الدليل بعناية قبل الاستخدام.

اسم المنتج: مكواة كهربائية	نموذج	قوة	الضغط الكهربائي	تكرار
	K1, K2	40W	220~	50Hz
المعايير التنفيذية:	K3, K5	35W	220~	50Hz
GB 4706.2-2007 / GB 4706.1-2005	K6, K7	30W	220~	50Hz
GB 17625.1-2022 / GB 4343.1-2018	K8, K9	25W	220~	50Hz

تعلیمات:

1. برنجی استخدام کوی القیاس لمدۀ 15 ثانیہ قبل الاستخدام.
2. رقم بتوصل مصدر الطاقه وتسخیه لمدۀ 15 ثانیہ قبل الاستخدام.
3. رشن کیمه مناسبه من الماء علی المنطقه المراد کسبها، و من کما بهن شکل مسطح.
4. بعد الاستخدام، فقط افضل مصدر الطاقه.
5. تطبیف المیاه المنقیه فی جسم المائتره.
6. یمکن تخزين لوحه التسخین بعد أن تبرد.

الأحكام والشروط:

[illegible]

احتیاط:

1. لا يسمح للمستخدم ترك أنبائه متوصلة به بعد الطاقه
2. قبل ملء خزان الماء، يجب فصل المكواه عن المقبس
3. يجب استخدام المكواه وموصها على سطح ثابت
عند وضع المكواه على حاملها، تأكد من أن الحامل على سطح ثابت
[د] ضغط المكواه أو ظهرت علامات تلف واضحة، أو كانت تسرب، فهذا
لا يمكن استخدام المكواه الكهربائيه
في حالة تلف سلك الطاقه الكهربائيه أو حوّل حبل أو قسم الخط
مقطع أو مفلطح أو مهزله من الشركة المصنعه أو الخدمة التي لها أو قسم صيانت
يجب أن يتم إجراء الاستبدال بواسطة

ألياف الملابس وطرق الكي

1. بالنسبة للأقمشة الحساسة للحرارة، يجب وضع قطعة قماش فوق الملابس لتجنب التشوه أو التلف.
2. عند كي الملابس المخلوطة، اختاري درجة الحرارة بناءً على الألياف الأقل مقاومة للحرارة.
3. عند كي الملابس المصنوعة من أقمشة مختلفة، قم بكي الملابس ذات المقاومة الحرارية الضعيفة أولاً.

صيانة:

1. امسح الجزء السفلي والأجزاء الأخرى من المكواة بقطعة قماش ناعمة.
2. عند وجود بقع خطيرة على المنتج، لا تنظفه مباشرة بالماء واستخدم قطعة قماش ناعمة لتنظيفه.

يمكن إزالة المواد النشوية بقطعة قماش مبللة بالماء أو راسب منصف بلوحة القاعدة 3
تنظيف مع المنظفات السائلة
يمكن تنظيف الشعر والأجزاء البلاستيكية والأجزاء المعدنية لمساحة 4

5. يتم قلب الحديد رأساً على عقب.

تحذیر:

1. لا تلمس منطقة لوحة التسخين عند استخدام المنتج لتجنب الحروق.
2. يجب إيقاف تشغيل المنتج بعد الاستخدام وإبقائه بعيداً عن المواد القابلة للاشتعال والانفجار.



Electric Iron Instruction Manual



Dear Customers:

Thanks for purchasing our products, please kindly read this manual carefully before use for the correct means.

Product name: Electric Iron	Product model	Rated power	Rated voltage	Rated frequency
Execution standards GB 4706.2-2007 GB 4706.1-2005 GB 17625.1-2022 GB 4343.1-2018	K1, K2	40W	220~	50Hz
	K3, K5	35W	220~	50Hz
	K6, K7	30W	220~	50Hz
	K8, K9	25W	220~	50Hz

Methods of Use:

1. Use a measuring cup to add water before use.
2. Connect to the power supply and wait for 15 seconds to heat up before use.
3. Spray a suitable amount of water on the area that needs to be ironed for flattening.
4. After use, unplug the power.
5. Clean out the remaining water inside the fuselage.
6. Store it after the heating panel has cooled down.

Instructions for use:

1. Before use, please check if the required voltage matches the voltage in your home. If the product has a grounding plug, it must be plugged into a grounded outlet.
2. Please use this product according to designed functions and do not use it outside of the specified usage range.
3. The product is prohibited for use by individuals with physical or mental disabilities or those lacking the required operational experience, and should be used under the guidance and supervision of a responsible person for their safety.
4. This product is prohibited for use by children. Please do not let children play with this product.
5. Do not immerse the electric iron in an area accessible to children when the electric iron temperature has not cooled down. Please be careful and take good care of children when using.
6. Do not pour chemical or other cleaning agents into the water storage tank.
7. Do not use vinegar additives, fragrances, or descaling agents.
8. When temporal stop is required after use, place the electric iron on the base and then unplug the power plug.
9. Please turn off the switch before inserting or removing the plug. Do not pull the power cord forcefully in use. When cutting off the power, please hold the plug and pull it out.
10. Do not immerse the electric iron in water or any other liquid.
11. Do not use this product with wet hands.
12. Do not expose this product to rain or direct sunlight.
13. Do not touch the hot plate directly when using to prevent burns.
14. For the high temperature of the electric iron, please do not use the machine directly on the human body to avoid burns.

Notes:

1. Do not leave during the power-on period.
2. Before adding water to the water tank, the power plug of the electric iron must be unplugged from the socket.
3. The electric iron must be used and placed on a stable surface.
4. When the electric iron is placed on the bracket, make sure that the surface of the bracket is stable and reliable.
5. Do not use the product if it has been dropped or if visible damage or leakage has occurred.
6. If the power cord is damaged, please stop using it immediately to avoid danger; replacement must be carried out by professionals from the manufacturer's maintenance department or similar department.

Clothing Fibers and Ironing Methods:

1. For heat-sensitive fabrics, a cloth should be placed on top of the garment when ironing to prevent deformation or damage.
2. When ironing blended fabrics, the temperature should be selected based on the fiber with lower heat resistance.
3. When ironing different fabrics, start by ironing the ones with lower heat resistance.

Maintenance Method:

1. Use a soft cloth to wipe the bottom and other parts of the electric iron.
2. When the product has severe stains, do not wash it directly with water, but use a soft cloth dampened with a neutral detergent to wipe it.
3. Any sediment or starch substance adhered to the bottom plate can be cleaned with a damp cloth or a liquid cleaner that does not contain abrasive properties.
4. Avoid using wire or metal cleaning tools to wipe the bottom plate. Clean up plastic parts with a damp cloth and then wipe dry with a cloth.
5. Turn off the power switch and wait for the electric iron to cool down completely before turning it upside down.

 Warnings:

1. Please do not touch the heated plate area while using the product to avoid burns.
2. Please turn off the power and keep away from flammable and explosive materials after use.



z\elazko elektryczne
poradnik uzytkownika



szanowany uzytkownik:
Serdecznie dzi\ekujemy za zakup produktu naszej firmy. Aby zapewnic prawidlowe uzytkowanie produktu,
Przed uzyciem nalezy uwaznie przeczytac niniejsza instrukcje.

Nazwa produktu	Z\elazko elektryczne	Model	moc	Napiecie	cz\estotliwosc
		K1, K2	40W	220~	50Hz
Standardy realizacji		K3, K5	35W	220~	50Hz
GB 4706.2-2007	GB 4706.1-2005	K6, K7	30W	220~	50Hz
GB 17625.1-2022	GB 4343.1-2018	K8, K9	25W	220~	50Hz

- Instrukcje:
- Przed uzyciem dodaj wod\e za pomoca miarki.
 - Podlacz do zasilania, po 15 sekundach nagrzewania mozna uzywac.
 - W miejscach wymagaj\acych prasowania, nagrzewaj spryskaj niewielka ilośc wod\y, a nast\epnie wyprasuj na plosko.
 - Po zako\nczeniu uzywania, odlacz zasilanie.
 - Woda pozostala w kadlubie zostala usuni\eta.
 - Panel grzewczy nalezy schowac dopiero po ostygni\ciu.

- Regulamin:
- Przed uzyciem sprawdź, czy napi\ecie wymagane dla tego produktu jest z\godne z napi\eciem w Twoim domu. Jeśli produkt jest z\godny, podlacz go do zasilania. Jeśli nie, nie mo\esz go uzywac.
 - Jeżeli produkt posiada wtyczk\e z uziemieniem, nalezy ja podlaczyc do uziemionego gniazda.
 - Przezy uzywac produktu zgodnie z jego funkcjami i projektem, nie uzywaj go poza okre\slonym zakresem zastosowania.
 - Nalezy go uzywac wykluczenie pod nadzorem i kierownictwem osoby odpowiedzialnej za jego bezpiecze\stwo.
 - Produkt jest zabroniony dla dzieci, nie pozwol dzieciom bawic sie tym produktem.
 - Nie nalezy umieszczac z\elazka w miejscu dost\epnym dla dzieci, dopoki nie zostanie wycofany z u\zytku.
 - Nigdy nie wlewaj ocu ani innych srodkow do czyszczenia brudu do zbiornika na wod\e.
 - Niedozwolone sa z\adne dodatki chemiczne, substancje zapachowe ani odkamieniacze.
 - Po tymczasowym przerwie pracy po u\zyciu, z\elazko nalezy owin\ec i umieścic na podstawie, a nast\epnie odlaczyc od zasilania.
 - Glova wyciagn\eta.
 - Przed wlozeniem lub wyciagn\ciem wtyczki, upewnij sie, ze przelecznik jest wycofany z gniazda.
 - Nie zanurzaj z\elazka w wodzie ani innych plynach.
 - Zabrania sie uzywania produktu mokrymi rekami.
 - Nie wystawiaj tego produktu na dzialanie deszczu lub swiatla slonecznego.
 - Nie dotykaj gor\acej płyty grzewczej podczas uzytkowania, aby uniknac oparzen.
 - Z\elazko jest bardzo gor\ace, aby uniknac oparzen, nie nalezy kierowac go bezpo\rednio na ci\elo.

- Srodki ostrozności:
- Podczas podlaczania z\elazka do pr\adu, uzytkownik nie moze go opuszczac.
 - Przed napelnieniem zbiornika wod\ą nalezy odlaczyc z\elazko od gniazda elektrycznego.
 - Z\elazko nalezy uzywac i odkladac na stabilnej powierzchni.
 - Gdy z\elazko jest umieszczone na swojej podstawie, nalezy upewnic sie, ze podstawa stoi na stabilnej powierzchni.
 - Jeśli z\elazko upadnie, bedzie miało widoczne uszkodzenia lub bedzie przeciekac, to:
Z\elazko jest niesprawne.
 - Jeśli przewo\l zasilaj\acy z\elazka jest uszkodzony lub wyst\epuj\ inne usterki, aby uniknac zagrozenia, Wymiana musi byc przeprowadzona przez wykwalifikowanego pracownika producenta, jego dzialu serwisowego lub podobnego dzialu.

- Wlo\kna odzieży i sposo\l prasowania:
- W przypadku tkanin wrażliwych na cieplo, nalezy uzywac podkladki podczas prasowania, aby zapobiec odkształceniu lub uszkodzeniu.
 - W przypadku prasowania ubra\ń z tkanin mieszan\ych, temperature nalezy dobrac do wlo\kna o ni\zej odporności na cieplo.
 - Prasuj\ac ubrania z r\oznych materialow, zaczynaj od tych, które sa mniej odporne na cieplo.

- Konserwacja:
- Oczyszcz sp\od z\elazka i inne cz\esci mi\ekka szmatk\ą.
 - W przypadku wyst\apienia powa\zych plam na produkcie, nie czysz go bezpo\rednio wod\ą. Uzyj mi\ekkiej szmatki zwil\zonej wod\ą.
 - W przypadku jakichkolwiek osadow przyklej\acych sie do płyty grzewczej, czysz wilgotna szmatk\ą lub nie.
 - Unikaj uzywania druci\anych lub metal\owych plastikow\ych cz\esci do czyszczenia powierzchni.
 - Wylicz przelecznik zasilania i pozwol z\elazku calkowicie ostygn\ac, zanim z\elazko jest odwr\ocone.

- Ostrzeżenie:**
- Podczas uzytkowania produktu nie dotykaj obszaru płyty grzewczej, aby uniknac oparzen.
 - Po u\zyciu produktu nalezy wylicz zasilanie i trzymac go z dala od materialow latwopalnych i wybuchowych.



Electric Iron
Instruction Manual



Dear Customers:
Thanks for purchasing our products, please kindly read this manual carefully before use for the correct means.

Product name	Electric Iron	Product model	Rated power	Rated voltage	Rated frequency
		K1, K2	40W	220~	50Hz
Execution standards		K3, K5	35W	220~	50Hz
GB 4706.2-2007	GB 4706.1-2005	K6, K7	30W	220~	50Hz
GB 17625.1-2022	GB 4343.1-2018	K8, K9	25W	220~	50Hz

- Methods of Use:
- Use a measuring cup to add water before use.
 - Connect to the power supply and wait for 15 seconds to heat up before use.
 - Spray a suitable amount of water on the area that needs to be ironed for flattening.
 - After use, unplug the power.
 - Clean out the remaining water inside the fuselage.
 - Store it after the heating panel has cooled down.
- Instructions for use:
- Before use, please check if the required voltage matches the voltage in your home. If the product has a grounding plug, it must be plugged into a grounded outlet.
 - Please use this product according to designed functions and do not use it outside of the specified usage range.
 - The product is prohibited for use by individuals with physical or mental disabilities or those lacking relevant operational experience, unless under the guidance and supervision of a responsible person for their safety.
 - This product is prohibited for use by children. Please do not let children play with this product.
 - Do not place the electric iron in an area accessible to children when the electric iron temperature has not cooled down. Please be careful and take good care of children when using.
 - Do not pour vinegar or other cleaning agents into the water storage tank.
 - Do not use chemical additives, fragrances, or descaling agents.
 - When temporarily stopping the operation after use, place the electric iron on the base and then unplug the power plug.
 - Please turn off the switch before inserting or removing the plug. Do not pull the power cord forcefully in use. When cutting off the power, please hold the plug and pull it out.
 - Do not immerse the electric iron in water or any other liquid.
 - Do not use this product with wet hands.
 - Do not expose this product to rain or direct sunlight.
 - Please do not touch the hot plate when using to prevent burns.
 - For the high temperature of the electric iron, please do not use the machine directly on the human body to avoid burns.

- Notes:
- Do not leave during the power-on period.
 - Before adding water to the water tank, the power plug of the electric iron must be unplugged from the socket.
 - The electric iron must be used and placed on a stable surface.
 - When the electric iron is placed on the bracket, make sure that the surface of the bracket is stable and reliable.
 - Do not use the product if it has been dropped or if visible damage or leakage has occurred.
 - If the power cord is damaged, please stop using it immediately to avoid danger. replacement must be carried out by professionals from the manufacturer's maintenance department or similar department.

- Clothing Fibers and Ironing Methods:
- For heat-sensitive fabrics, a cloth should be placed on top of the garment when ironing to prevent deformation or damage.
 - When ironing blended fabrics, the temperature should be selected based on the fiber with lower heat resistance.
 - When ironing different fabrics, start by ironing the ones with lower heat resistance.

- Maintenance Method:
- Use a soft cloth to wipe the bottom and other parts of the electric iron.
 - When the product has severe stains, do not wash it directly with water, but use a soft cloth dampened with a neutral detergent to wipe it.
 - Any sediment or starch substance adhered to the bottom plate can be cleaned with a damp cloth or a liquid cleaner that does not contain abrasive properties.
 - Avoid using wire or metal cleaning tools to wipe the bottom plate. Clean up plastic parts with a damp cloth and then wipe dry with a cloth.
 - Turn off the power switch and wait for the electric iron to cool down completely before turning it upside down.

- Warnings:**
- Please do not touch the heated plate area while using the product to avoid burns.
 - Please turn off the power and keep away from flammable and explosive materials after use.



electrisch strijkijzer
handleiding



gerespecteerde gebruiker:
Hartelijk dank voor uw aankoop van dit product van ons bedrijf. Om u te helpen dit product correct te gebruiken,
Lees deze handleiding zorgvuldig door voor gebruik.

Productnaam: Elektrisch strijkijzer	model	stroom	Spanning	frequentie
	K1, K2	40W	220~	50Hz
Implementatiestandaards	K3, K5	35W	220~	50Hz
GB 4706.2-2007	K6, K7	30W	220~	50Hz
GB 17625.1-2022 GB 4943.1-2018	K8, K9	25W	220~	50Hz

- Instructies:**
1. Voeg voor gebruik water toe aan de maatbeker.
 2. Sluit de stekker aan en verwarm 15 seconden. Dan kunt u het gebruiken.
 3. Stuit eerst een gepaste hoeveelheid water op de plekken die gedroogd moeten worden en strijk ze vervolgens glad.
 4. Na gebruik de stekker uit het stopcontact halen.
 5. Het resterende water uit de behuizing verwijderen.
 6. Het verwarmingspaneel kan worden opgeborgen nadat het is afgekoeld.
- Vooraardien:**
1. Controleer voor gebruik of de vereiste spanning van dit product overeenkomt met de spanning in uw huis. Als het product niet overeenkomt, moet deze op een geaard stopcontact worden aangesloten.
 2. Als het product een geaard stekker heeft, moet deze op een geaard stopcontact worden aangesloten.
 3. Het product is bedoeld voor gebruik door mensen met een scherpzinnig of gemiddeld handcap of een gebrek aan relevante kenniservaring, behalve als het product anderszins anderszins is bedoeld.
 4. Het product is niet geschikt voor kinderen. Laat kinderen niet met dit product spelen.
 5. Plaats het strijkijzer niet binnen het bereik van kinderen voordat het is afgekoeld.
 6. Wees voorzichtig met kinderen in de buurt.
 7. Giet niet olijk azijn of andere vervuilingen in het waterreservoir.
 8. Er zijn geen chemische toevoegingen, geurstoffen of ontkalkers toegevoegd.
 9. Het product is niet bedoeld voor gebruik in een badkamer.
 10. Zet de schakelaar uit voordat u de stekker in het stopcontact steekt of eruit haalt.
 11. Gebruik het strijkijzer niet onder in water of andere vloeistoffen.
 12. Gebruik dit product niet met natte handen.
 13. Stel dit product niet bloot aan regen of zonlicht.
 14. Raak het verwarmingspaneel niet aan tijdens gebruik om brandwonden te voorkomen.
 15. De temperatuur van het strijkijzer is nog hoog. Om brandwonden te voorkomen, mag u het apparaat niet rechtstreeks op het lichaam gebruiken.

- Voorzorgsmaatregelen:**
1. Het strijkijzer mag niet onbeheerd worden achtergelaten wanneer het is aangesloten op het elektriciteitsnet.
 2. Voordat u het waterreservoir vult, moet u de stekker van het strijkijzer uit het stopcontact halen.
 3. Het strijkijzer moet op een stabiel oppervlak worden gebruikt en neergezet.
 4. Zorg ervoor dat de standaard op een stabiel oppervlak staat wanneer u het strijkijzer op de standaard plaatst.
 5. Als het strijkijzer is gevallen, zichtbare schade vertoont of lekt, dan moet het strijkijzer kan niet worden gebruikt.
 6. Als het netsnoer van het strijkijzer beschadigd is of als er andere defecten zijn, moet u het strijkijzer niet gebruiken om gevaar te voorkomen. Vervanging dient te worden uitgevoerd door de fabrikant, zijn servicedienst of een gelijkwaardig gekwalificeerde persoon.

- Vezel samenstelling van kleding en strijkinstucties:**
1. Strijk warmtegevoelige stoffen altijd met een doek ertussen om vervorming of beschadiging te voorkomen.
 2. Bij het strijken van kledingstukken van gemengde stoffen, moet de temperatuur worden gekozen op basis van de minst hittebestendige vezel.
 3. Bij het strijken van kledingstukken van verschillende stoffen, strijk je eerst de kledingstukken die minder hittebestendig zijn.
- Onderhoud:**
1. Veeg het strijkijzer en de onderkant schoon met een zachte doek.
 2. Wanneer het product ernstig vervuild is, was het dan niet direct met water. Gebruik een zachte doek. Was het met een neutraal reinigingsmiddel.
 3. Voor alle sedimenten die aan de bodem vastzitten, kan all be cleaned with a damp cloth or not. Voelbare reiniging met schurende eigenschappen.
 4. Gebruik geen schuurpompjes of metalen voorwerpen om het paneel schoon te maken. Gebruik een zachte doek. Na het schoonmaken, aldrogen met een doek.
 5. Schakel het strijkijzer uit en wacht tot het strijkijzer volledig is afgekoeld voordat u het gebruikt.
- Schakel het strijkijzer uit en wacht tot het strijkijzer volledig is afgekoeld voordat u het gebruikt.**
- Certificaat**
- Waarschuwing:**
1. Raak de verwarmingsplaat niet aan tijdens het gebruik van het product om brandwonden te voorkomen.
 2. Na gebruik van het product, dient u de stroom uit te schakelen en het product uit de buurt te houden van ontvlambare en explosieve materialen.

Electric Iron
Instruction Manual



Dear Customers:
Thanks for purchasing our products, please kindly read this manual carefully before use for the correct means.

Product name: Electric Iron	Product model	Rated power	Rated voltage	Rated frequency
	K1, K2	40W	220~	50Hz
Execution standards	K3, K5	35W	220~	50Hz
GB 4706.2-2007 GB 4706.1-2005	K6, K7	30W	220~	50Hz
GB 17625.1-2022 GB 4943.1-2018	K8, K9	25W	220~	50Hz

- Methods of Use:**
1. Use a measuring cup to add water before use.
 2. Connect to the power supply and wait for 15 seconds to heat up before use.
 3. Spray a suitable amount of water on the area that needs to be ironed for flattening.
 4. After use, unplug the power.
 5. Clean out the remaining water inside the fuselage.
 6. Store it after the heating panel has cooled down.
- Instructions for use:**
1. Before use, please check if the required voltage matches the voltage in your home. If the product has a grounding plug, it must be plugged into a grounded outlet.
 2. Please use this product according to designed functions and do not use it outside of the specified usage range.
 3. The product is prohibited for use by individuals with physical or mental disabilities or those lacking relevant operational experience, unless under the guidance and supervision of a responsible person for their safety.
 4. This product is prohibited for use by children. Please do not let children play with this product.
 5. Do not place the electric iron in an area accessible to children when the electric iron temperature has not cooled down. Please be careful and take good care of children when using.
 6. Do not pour vinegar or other cleaning agents into the water storage tank.
 7. Do not use chemical additives, fragrances, or descaling agents.
 8. When temporarily stopping the operation after use, place the electric iron on the base and then unplug the power plug.
 9. Please turn off the switch before inserting or removing the plug. Do not pull the power cord forcefully in use. When cutting off the power, please hold the plug and pull it out.
 10. Do not immerse the electric iron in water or any other liquid.
 11. Do not use this product with wet hands.
 12. Do not expose this product to rain or direct sunlight.
 13. Please do not touch the hot plate when using to prevent burns.
 14. For the high temperature of the electric iron, please do not use the machine directly on the human body to avoid burns.

- Notes:**
1. Do not leave during the power-on period.
 2. Before adding water to the water tank, the power plug of the electric iron must be unplugged from the socket.
 3. The electric iron must be used and placed on a stable surface.
 4. When the electric iron is placed on the bracket, make sure that the surface of the bracket is stable and reliable.
 5. Do not use the product if it has been dropped or if visible damage or leakage has occurred.
 6. If the power cord is damaged, please stop using it immediately to avoid danger. replacement must be carried out by professionals from the manufacturer's maintenance department or similar department.

- Clothing Fibers and Ironing Methods:**
1. For heat-sensitive fabrics, a cloth should be placed on top of the garment when ironing to prevent deformation or damage.
 2. When ironing blended fabrics, the temperature should be selected based on the fiber with lower heat resistance.
 3. When ironing different fabrics, start by ironing the ones with lower heat resistance.

- Maintenance Method:**
1. Use a soft cloth to wipe the bottom and other parts of the electric iron.
 2. When the product has severe stains, do not wash it directly with water, but use a soft cloth dampened with a neutral detergent to wipe it.
 3. Any sediment or starch substance adhered to the bottom plate can be cleaned with a damp cloth or a liquid cleaner that does not contain abrasive properties.
 4. Avoid using wire or metal cleaning tools to wipe the bottom plate. Clean up plastic parts with a damp cloth and then wipe dry with a cloth.
 5. Turn off the power switch and wait for the electric iron to cool down completely before turning it upside down.

- Warnings:**
1. Please do not touch the heated plate area while using the product to avoid burns.
 2. Please turn off the power and keep away from flammable and explosive materials after use.

